




p1-gain0-shaper0-dac1000

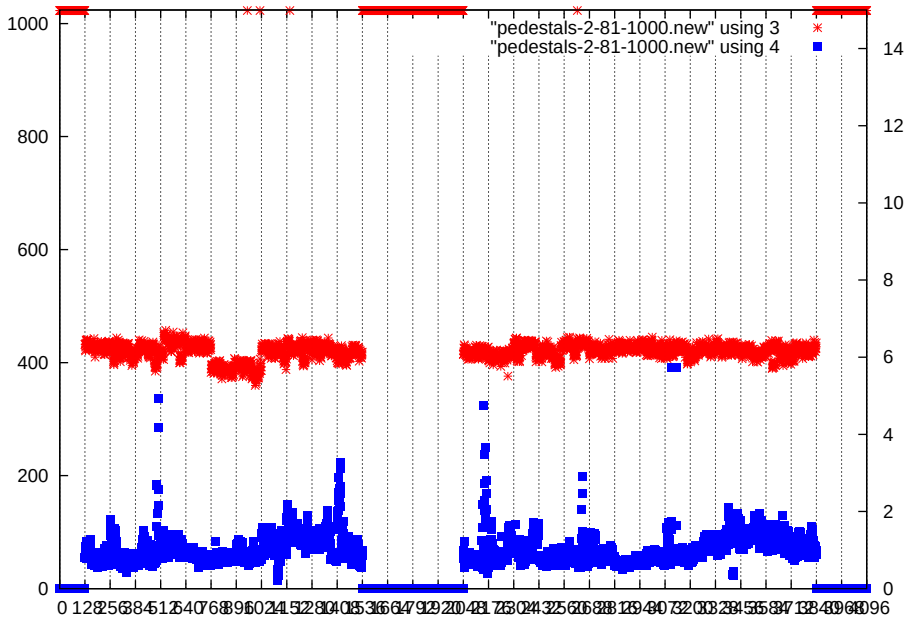


p1-gain0-shaper0-dac1500

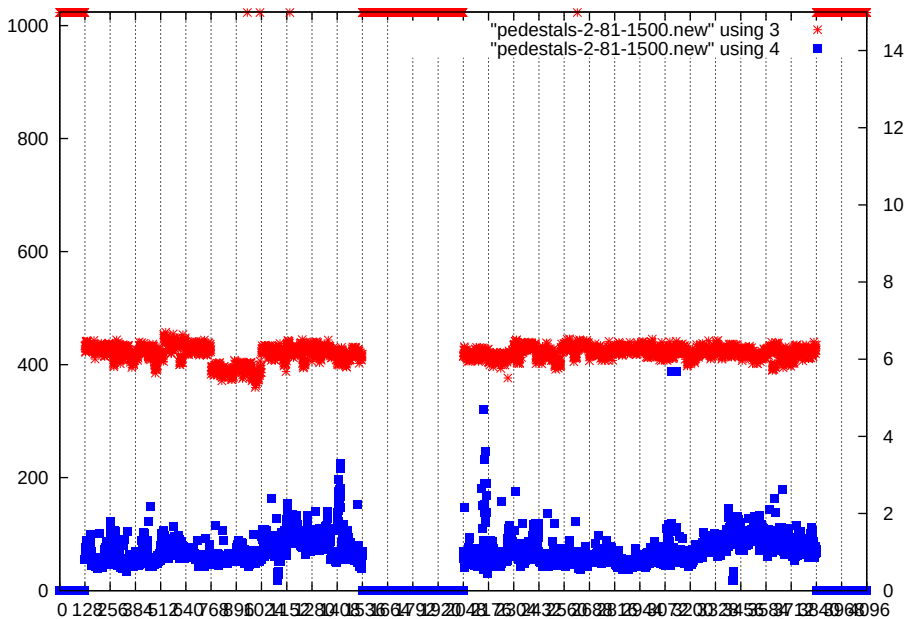


p1-gain0-shaper0-dac2000

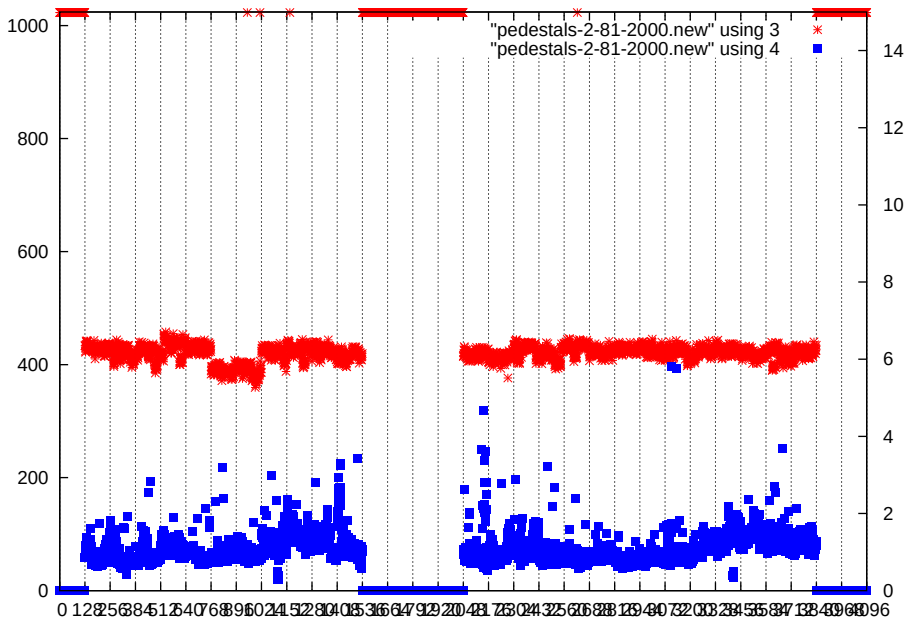


p1-gain0-shaper0-dac500

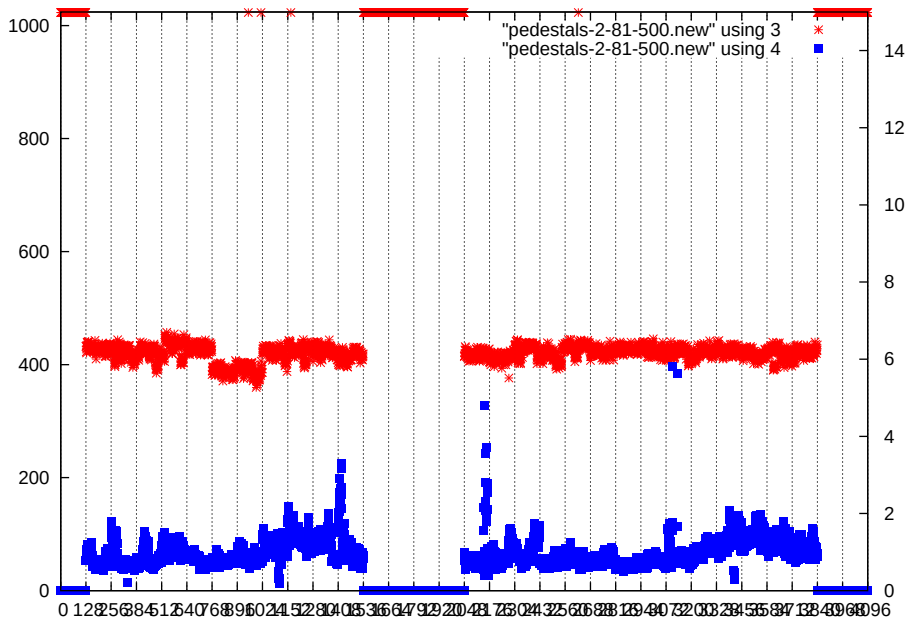


p1-gain1-shaper0-dac1000

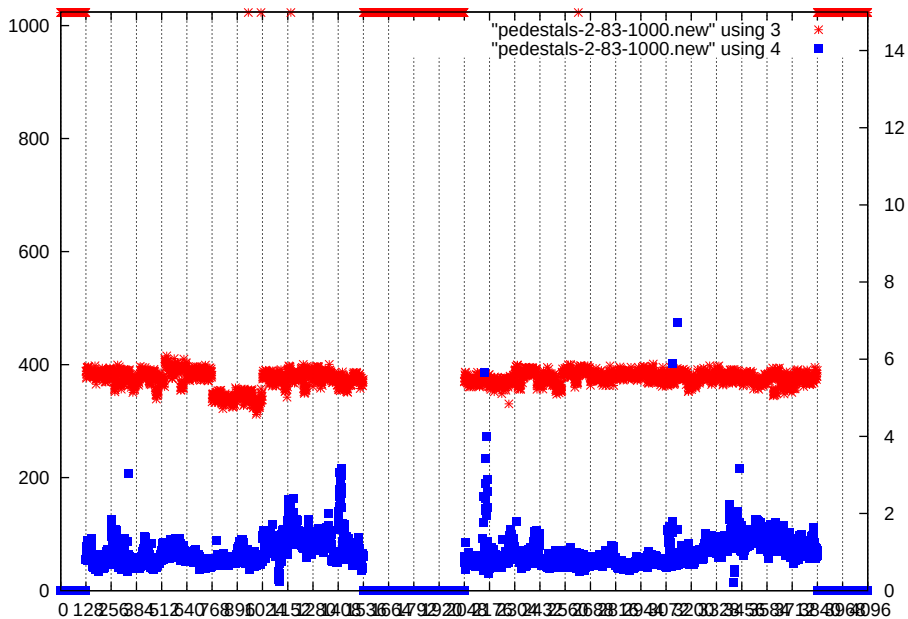


p1-gain1-shaper0-dac1500

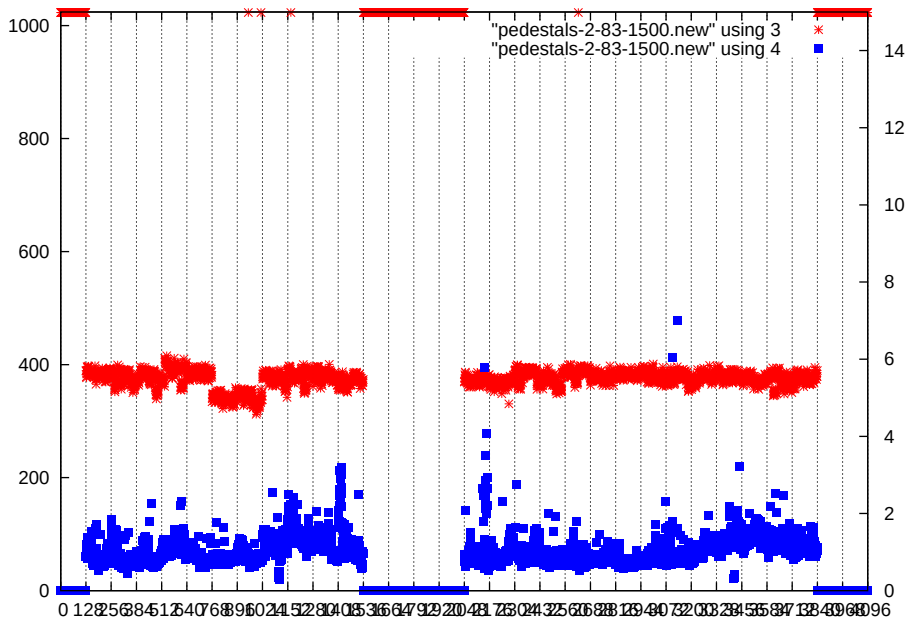


p1-gain1-shaper0-dac2000

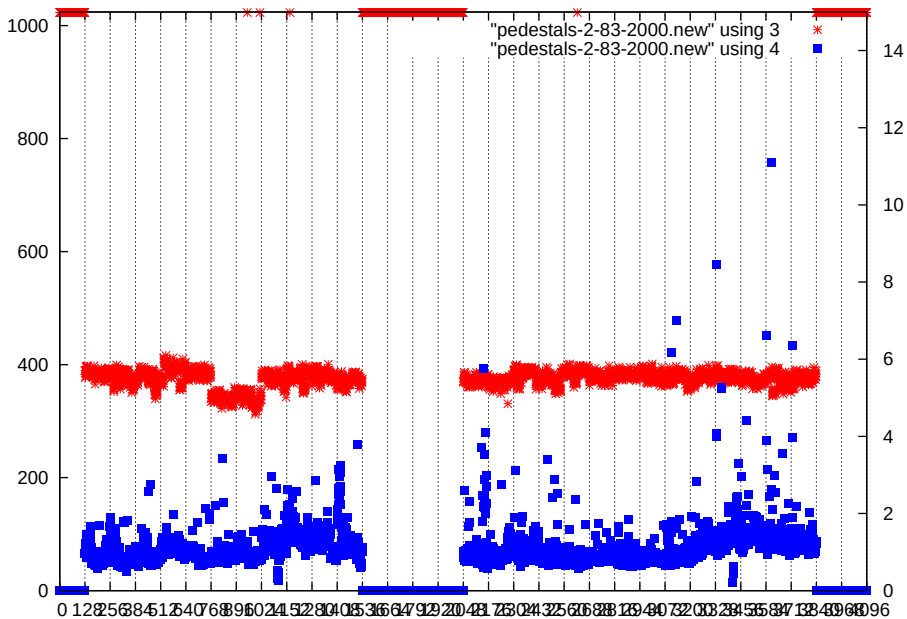


# p1-gain1-shaper0-dac500

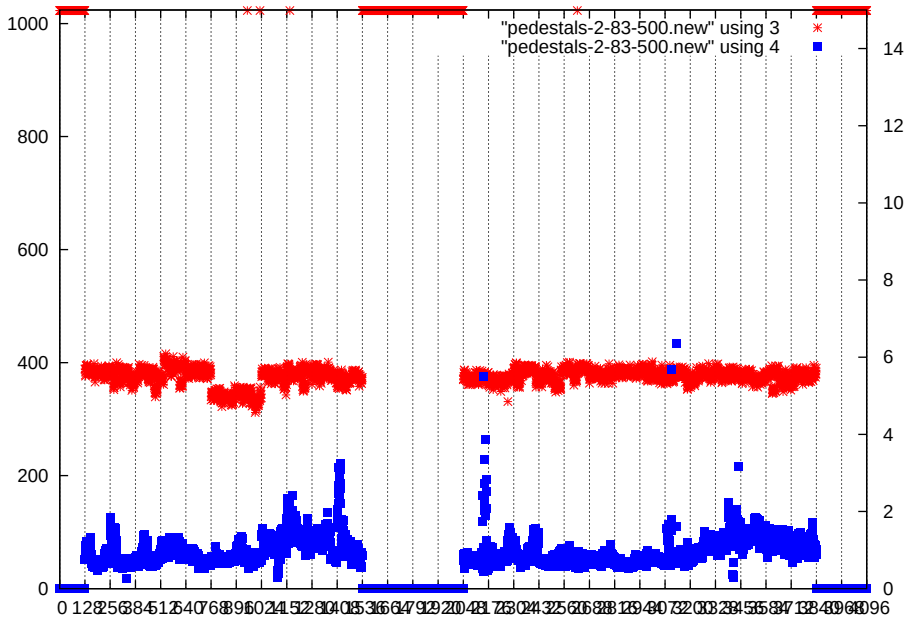


p1-gain2-shaper0-dac1000

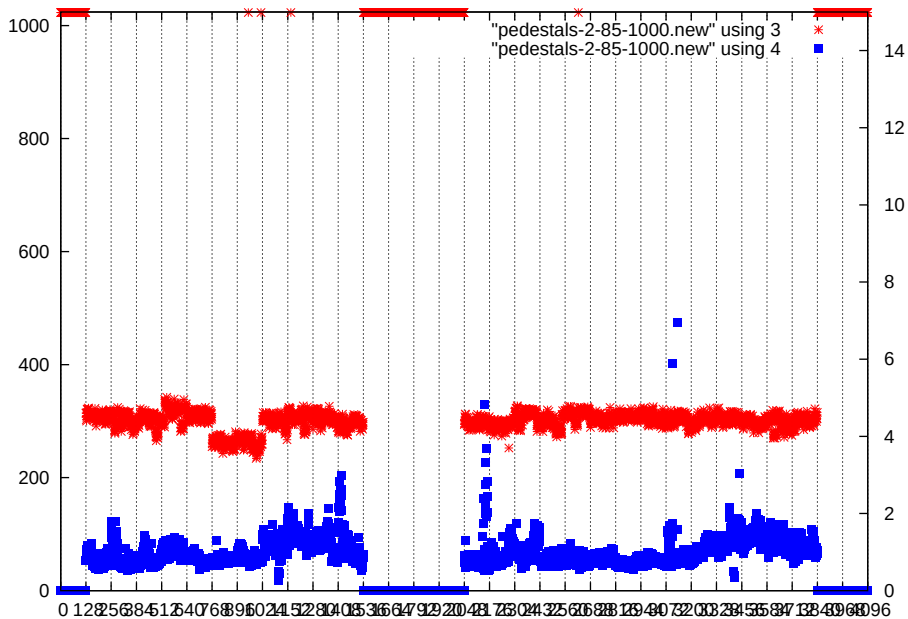


p1-gain2-shaper0-dac1500

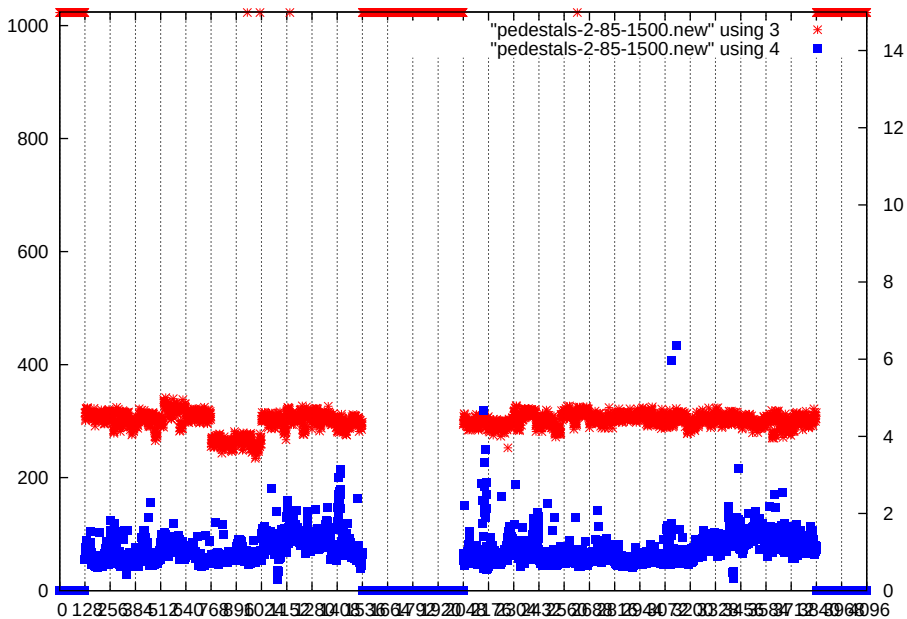


p1-gain2-shaper0-dac2000

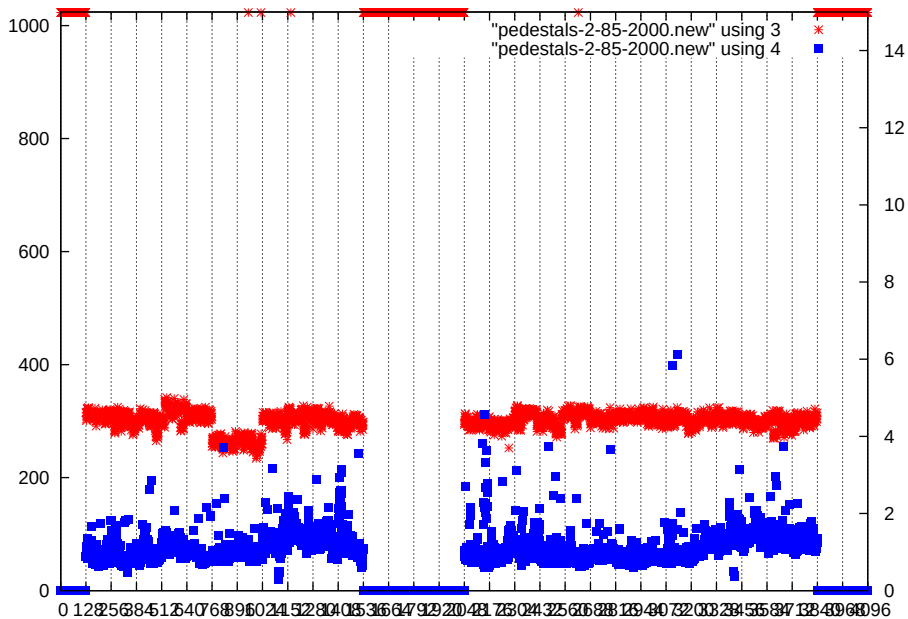


# p1-gain2-shaper0-dac500

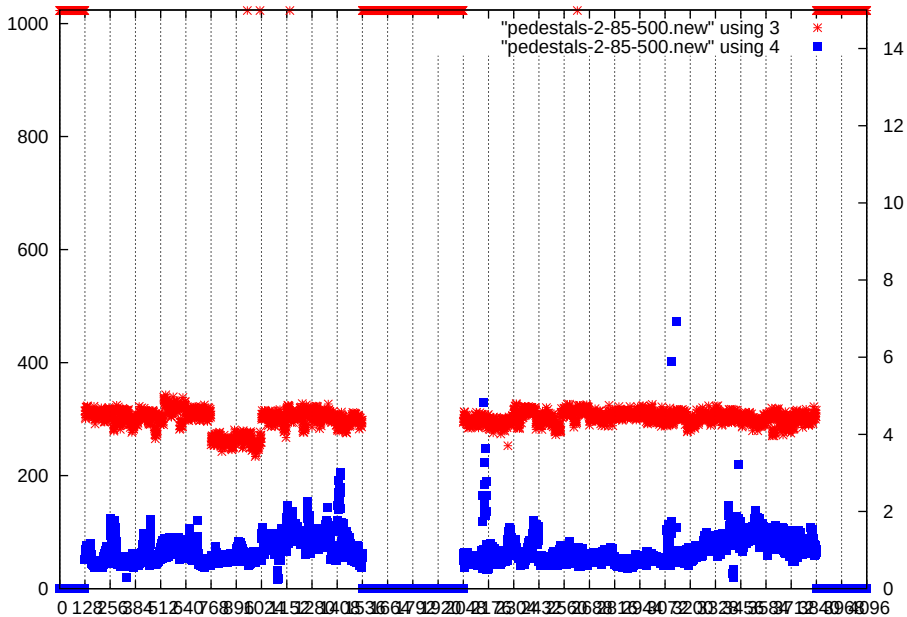


# p1-gain3-shaper0-dac0

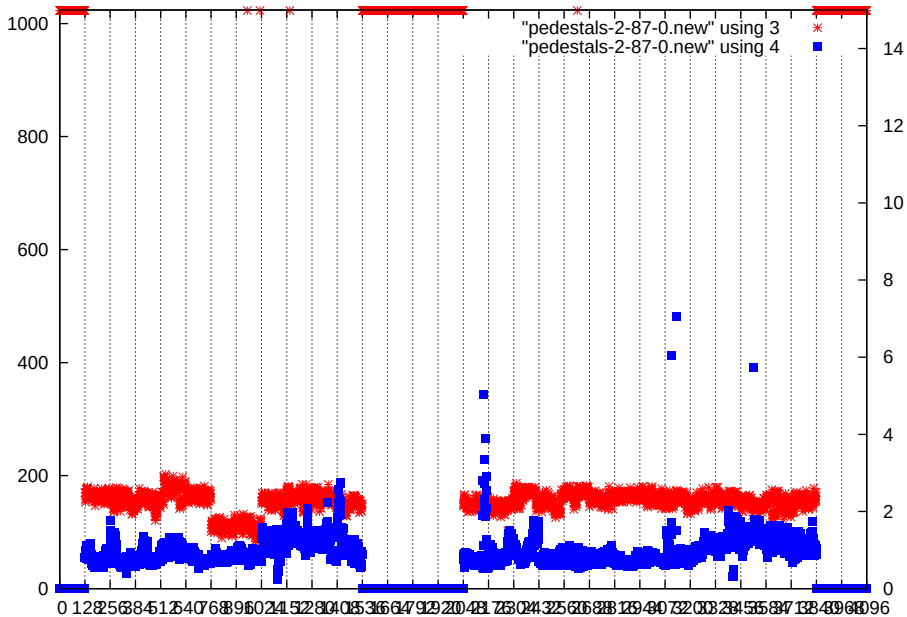


p1-gain3-shaper0-dac1000

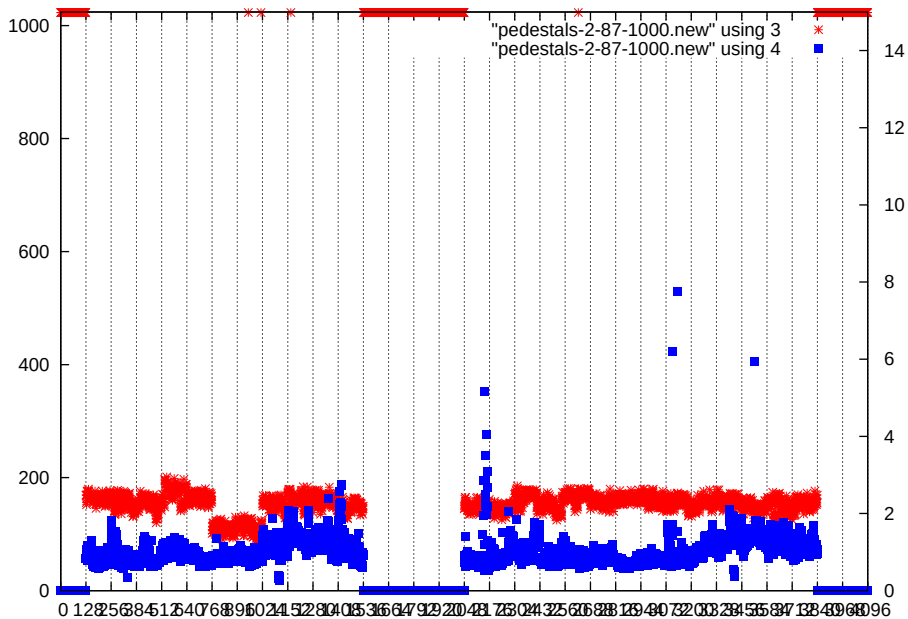

p1-gain3-shaper0-dac1500

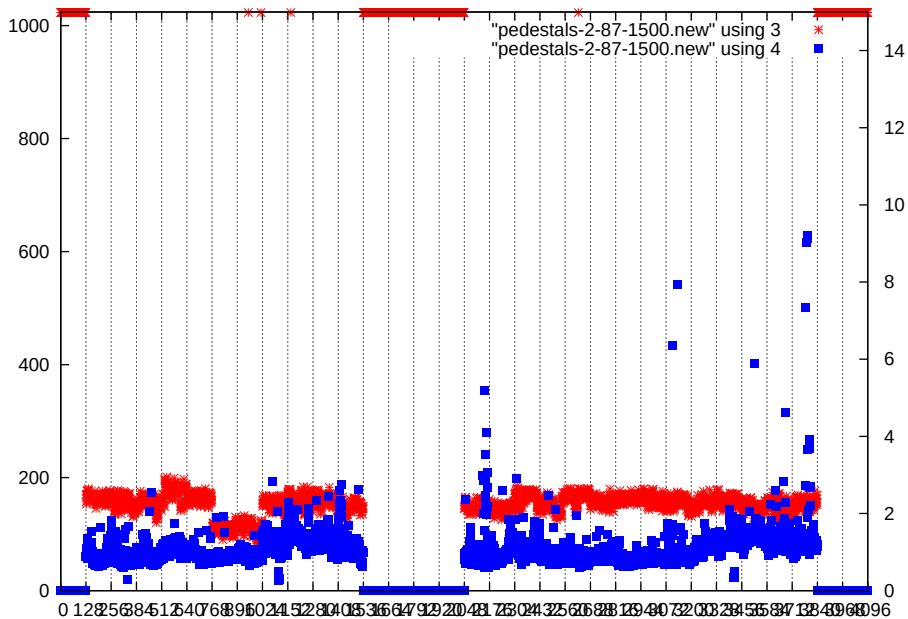

p1-gain3-shaper0-dac2000

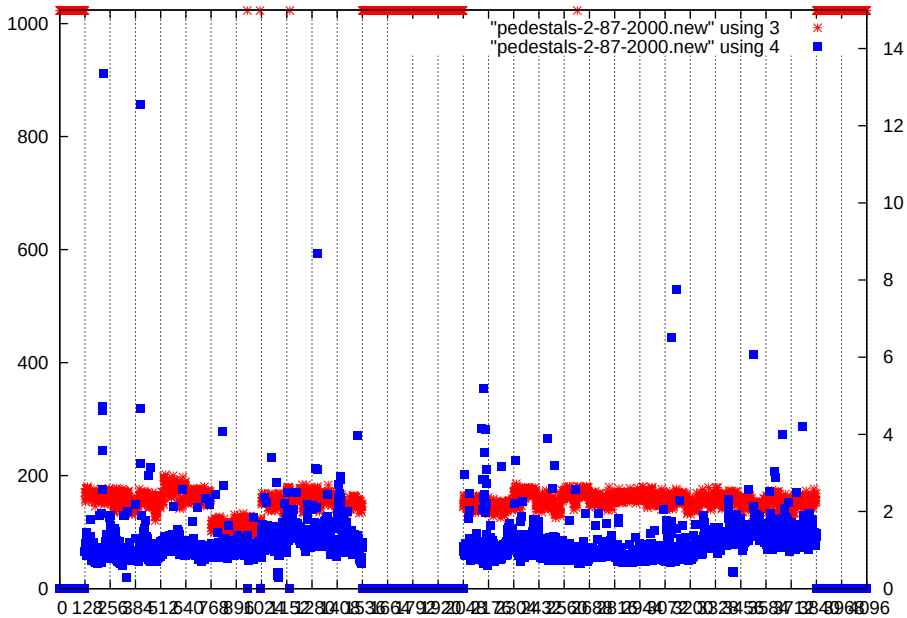

# p1-gain3-shaper0-dac500

