




Evt 10 Time mcm 0 chip 0 chan 0 pulser-10V-wire20

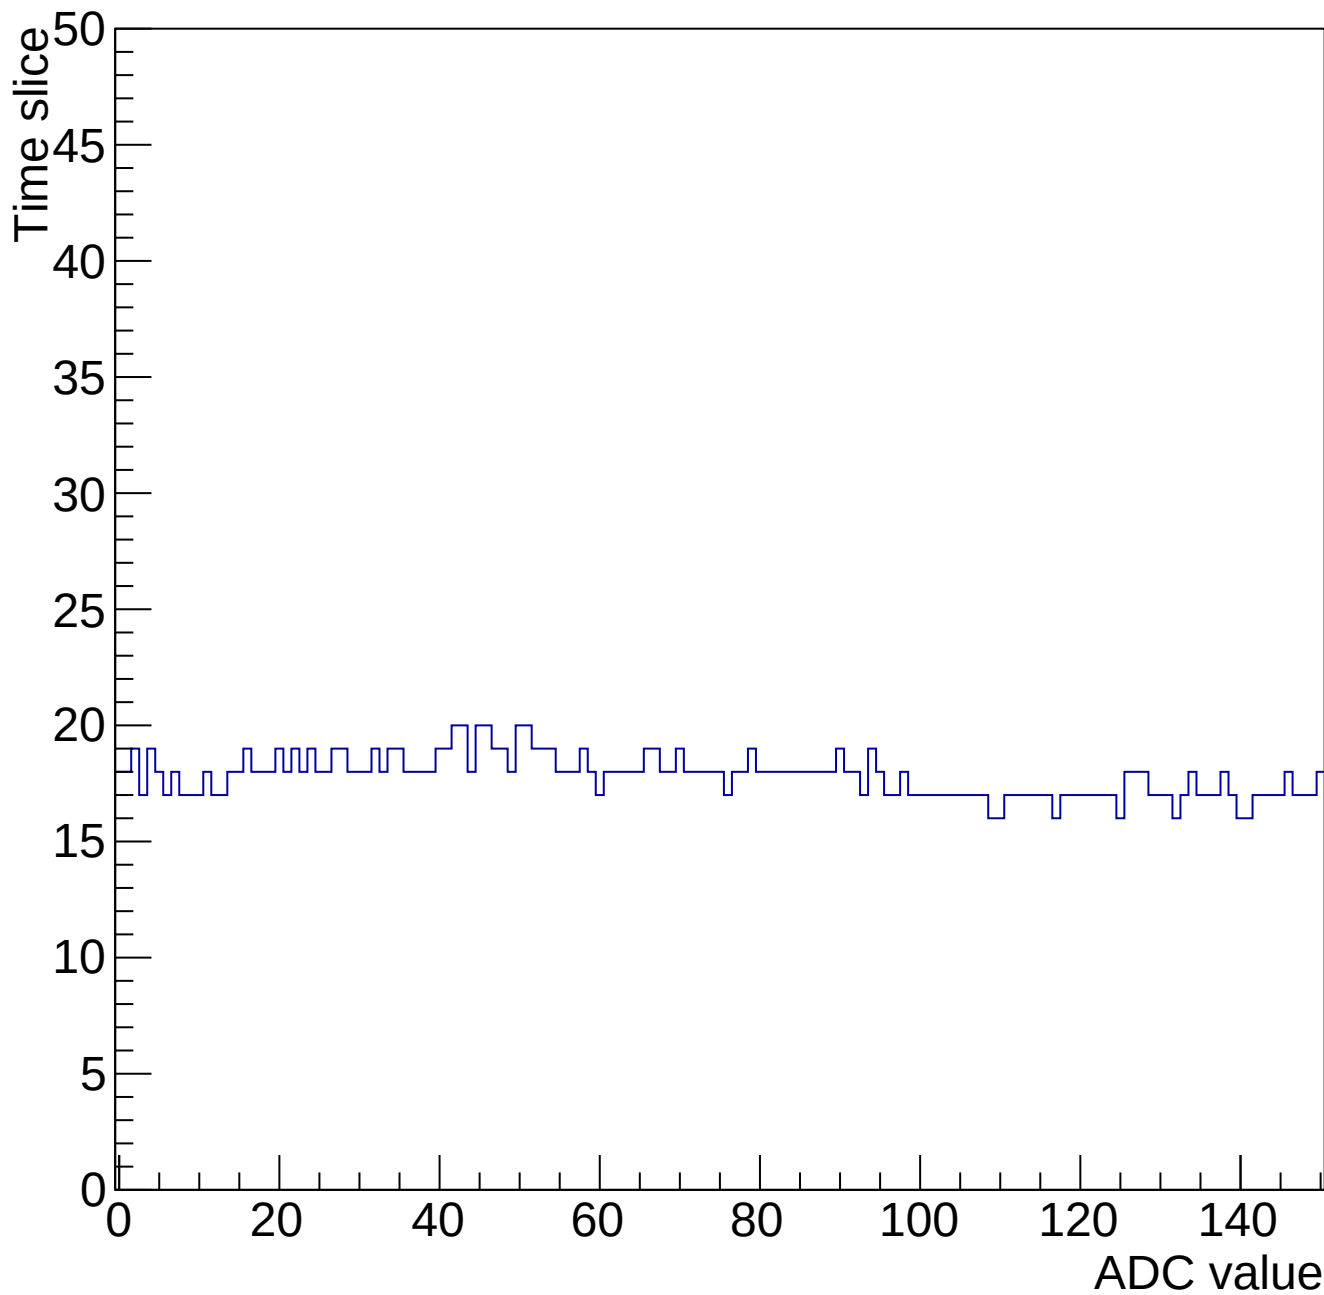


Evt 10 Time mcm 0 chip 0 chan 1 pulser-10V-wire20

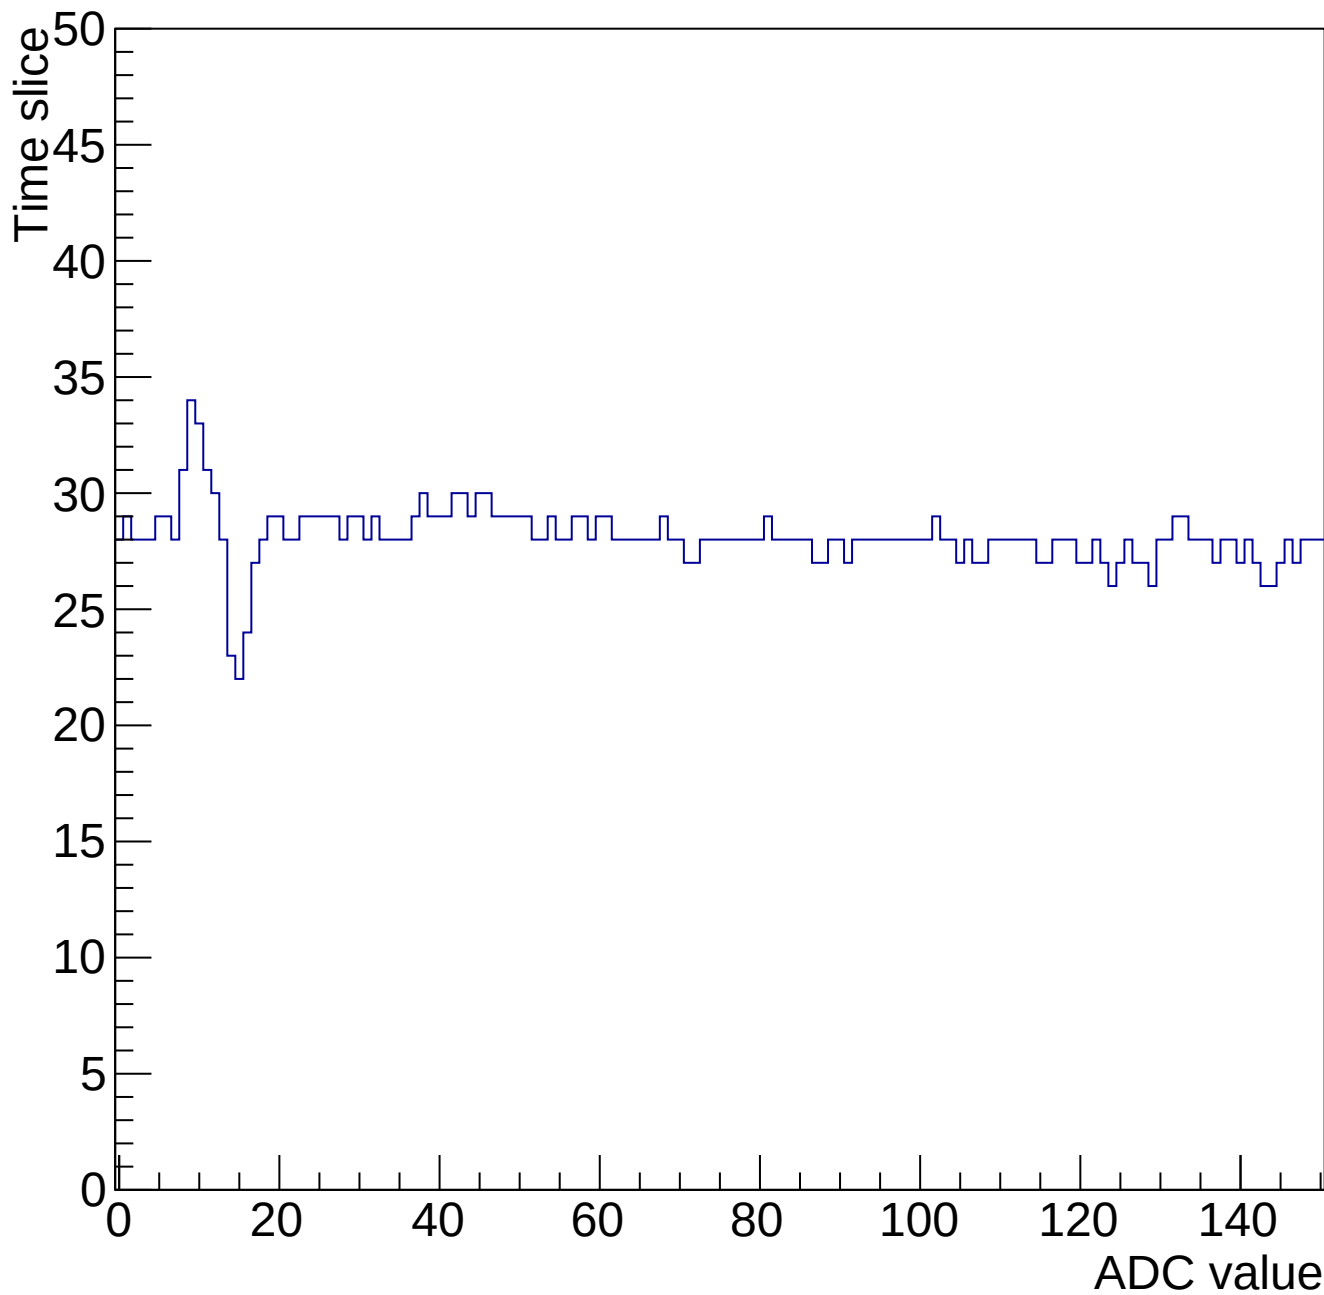


Evt 10 Time mcm 0 chip 0 chan 2 pulser-10V-wire20

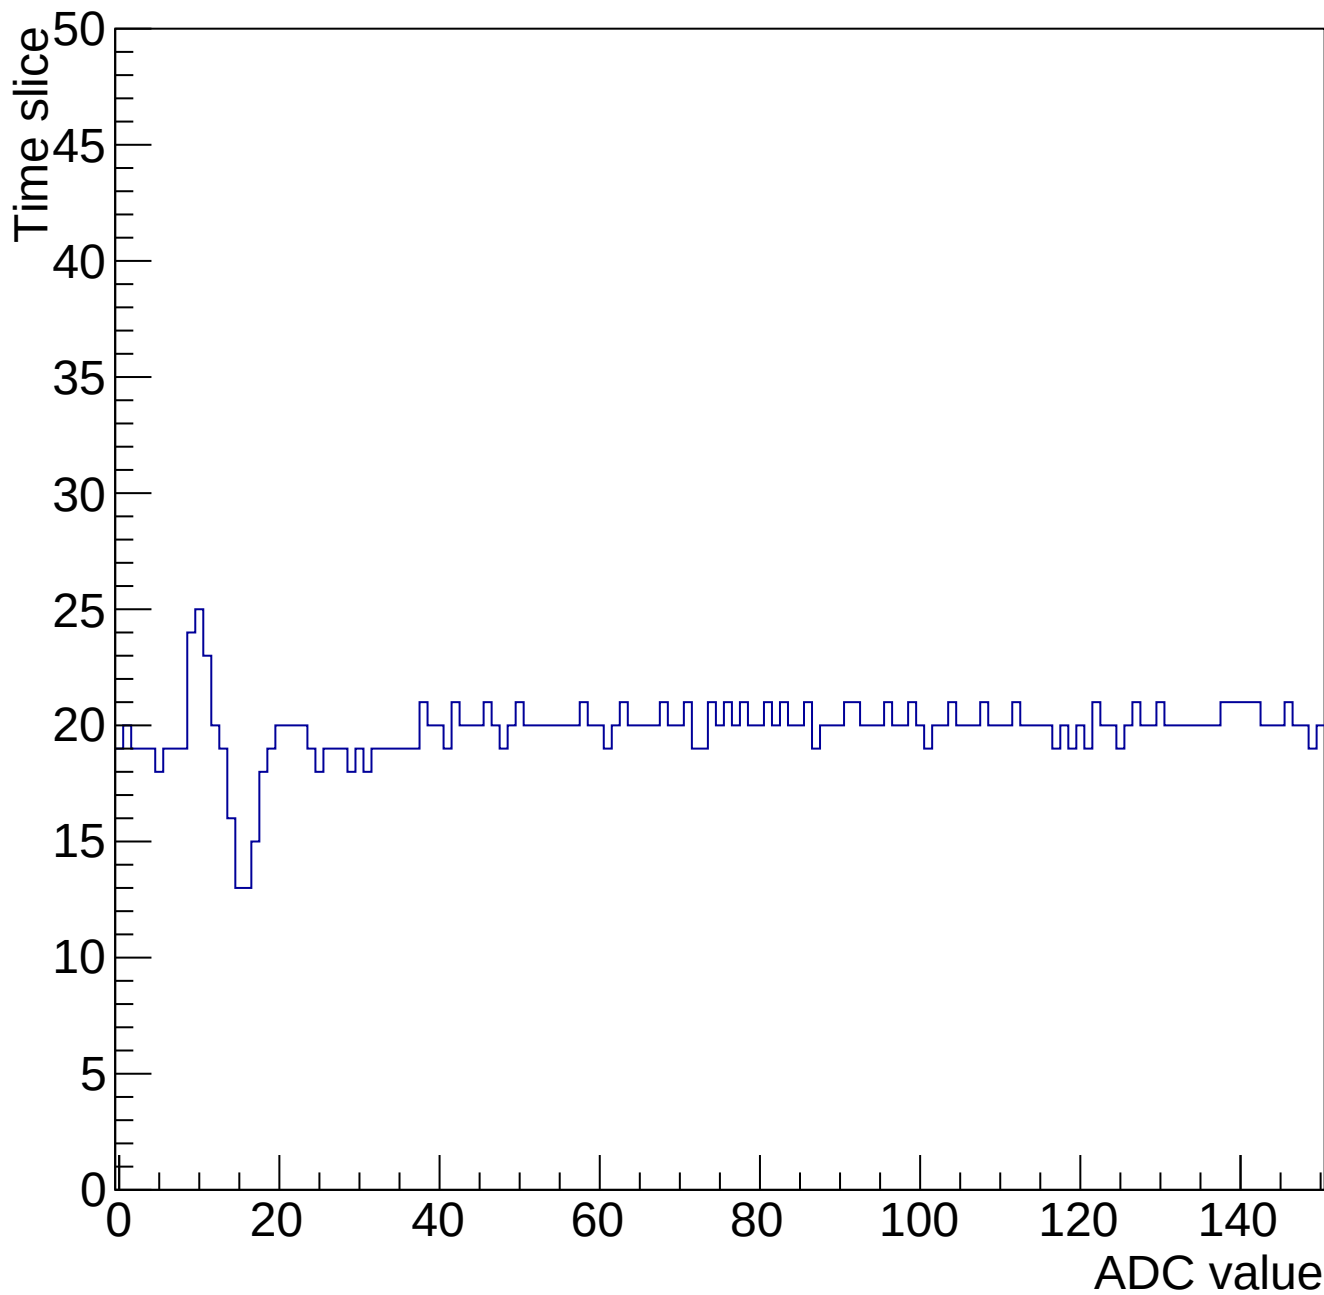


Evt 10 Time mcm 0 chip 0 chan 3 pulser-10V-wire20

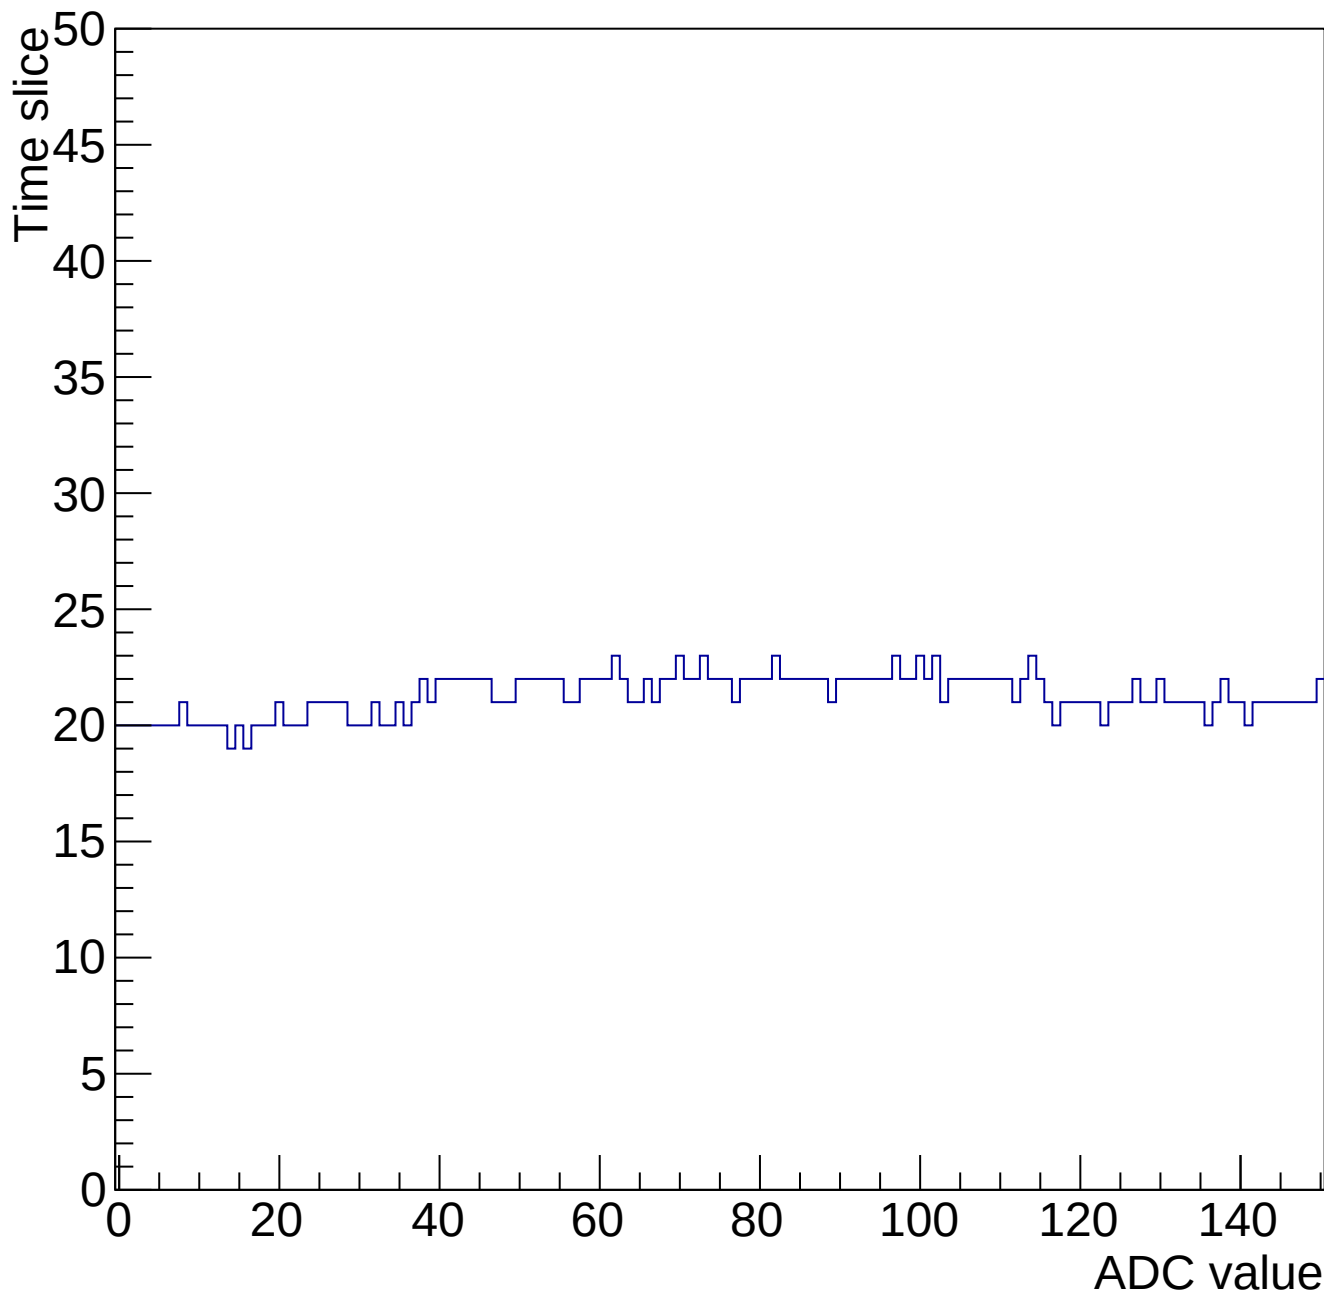


Evt 10 Time mcm 0 chip 0 chan 4 pulser-10V-wire20

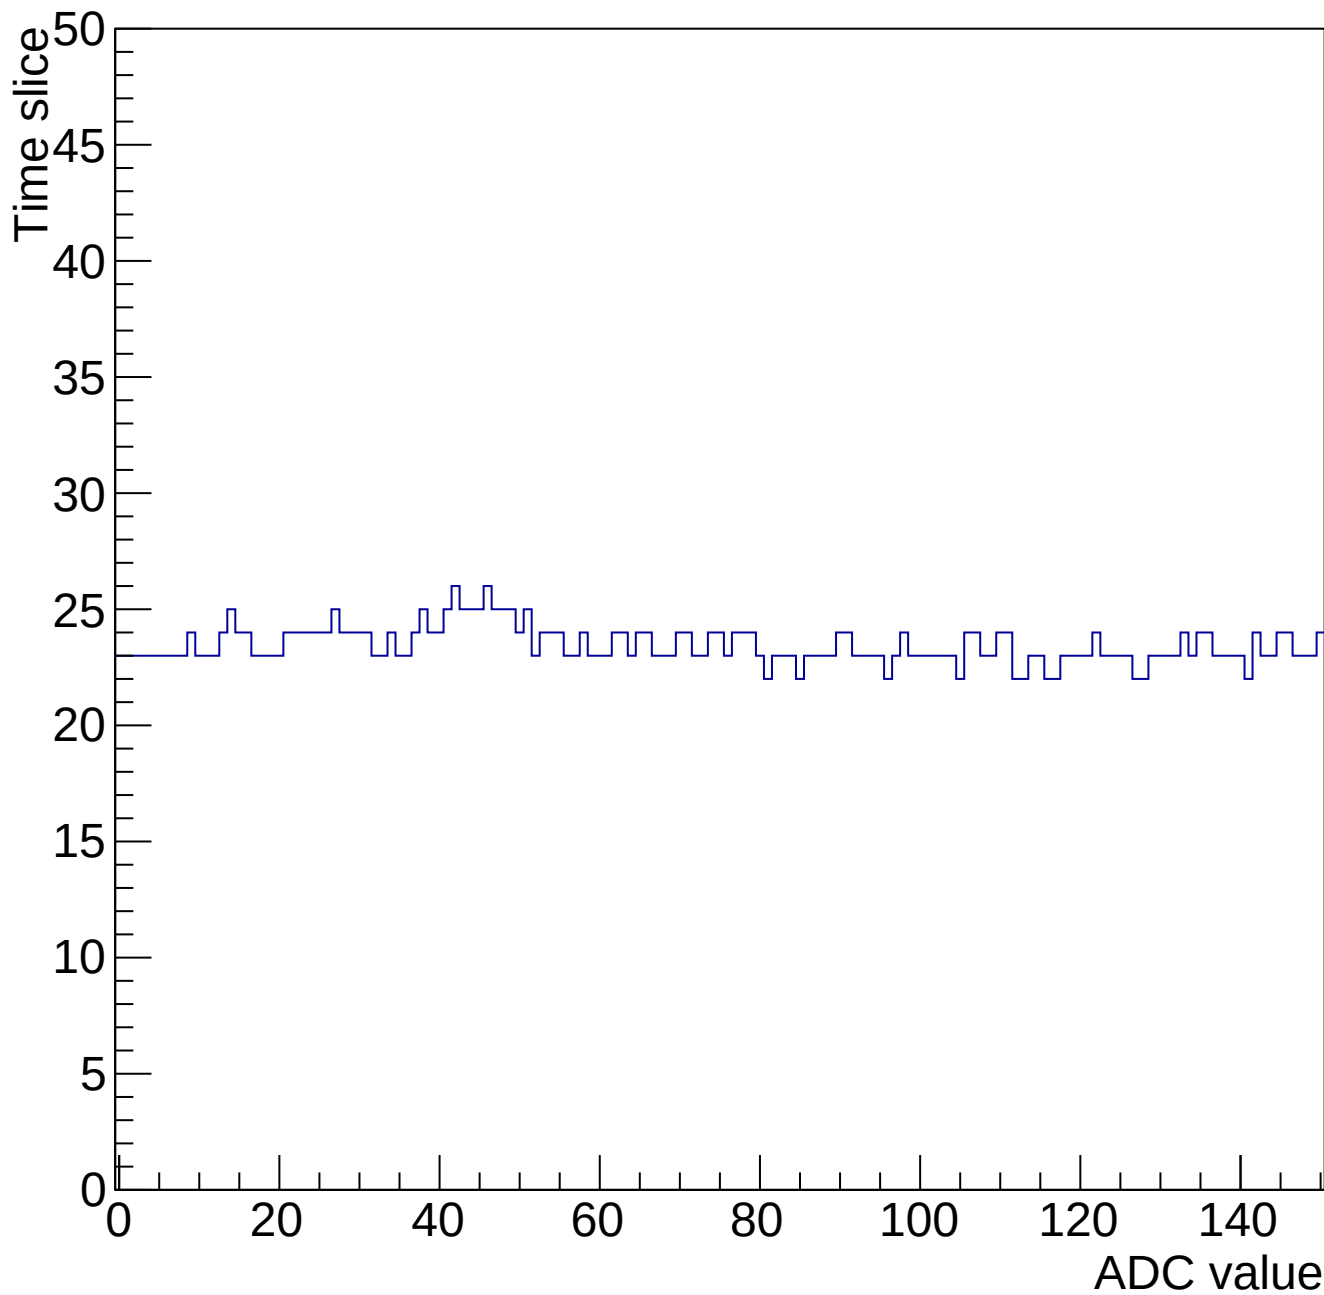


Evt 10 Time mcm 0 chip 0 chan 5 pulser-10V-wire20

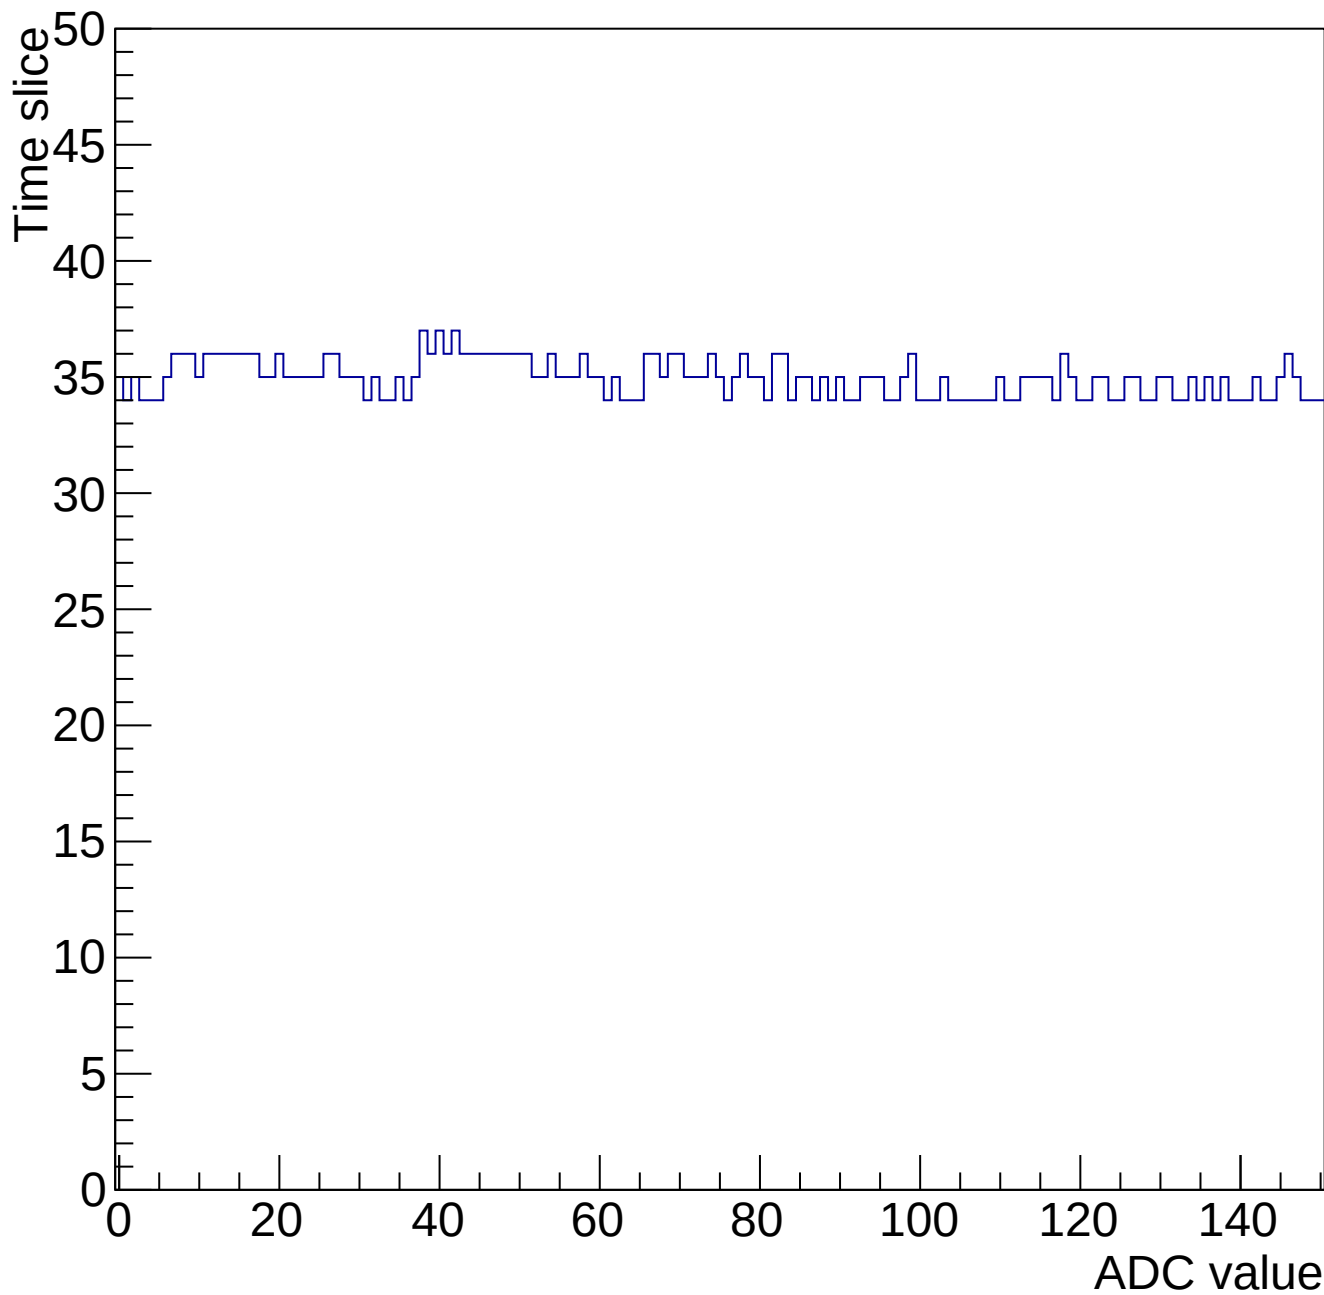


Evt 10 Time mcm 0 chip 0 chan 6 pulser-10V-wire20

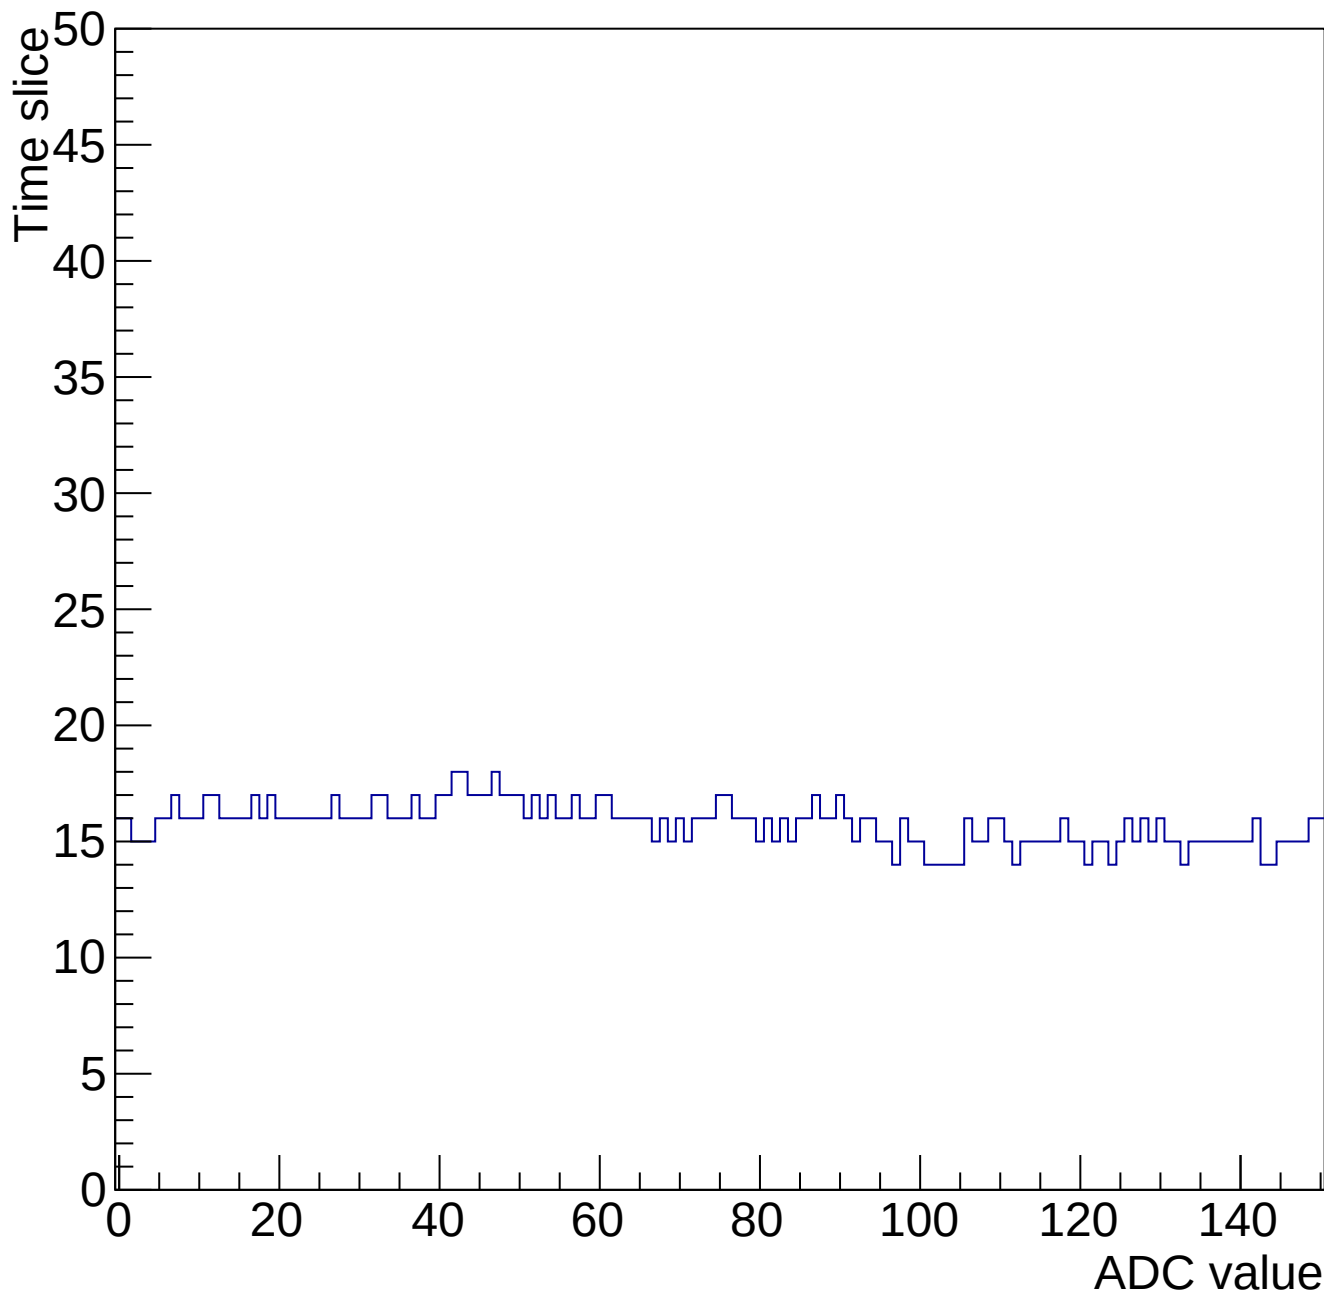


Evt 10 Time mcm 0 chip 0 chan 7 pulser-10V-wire20

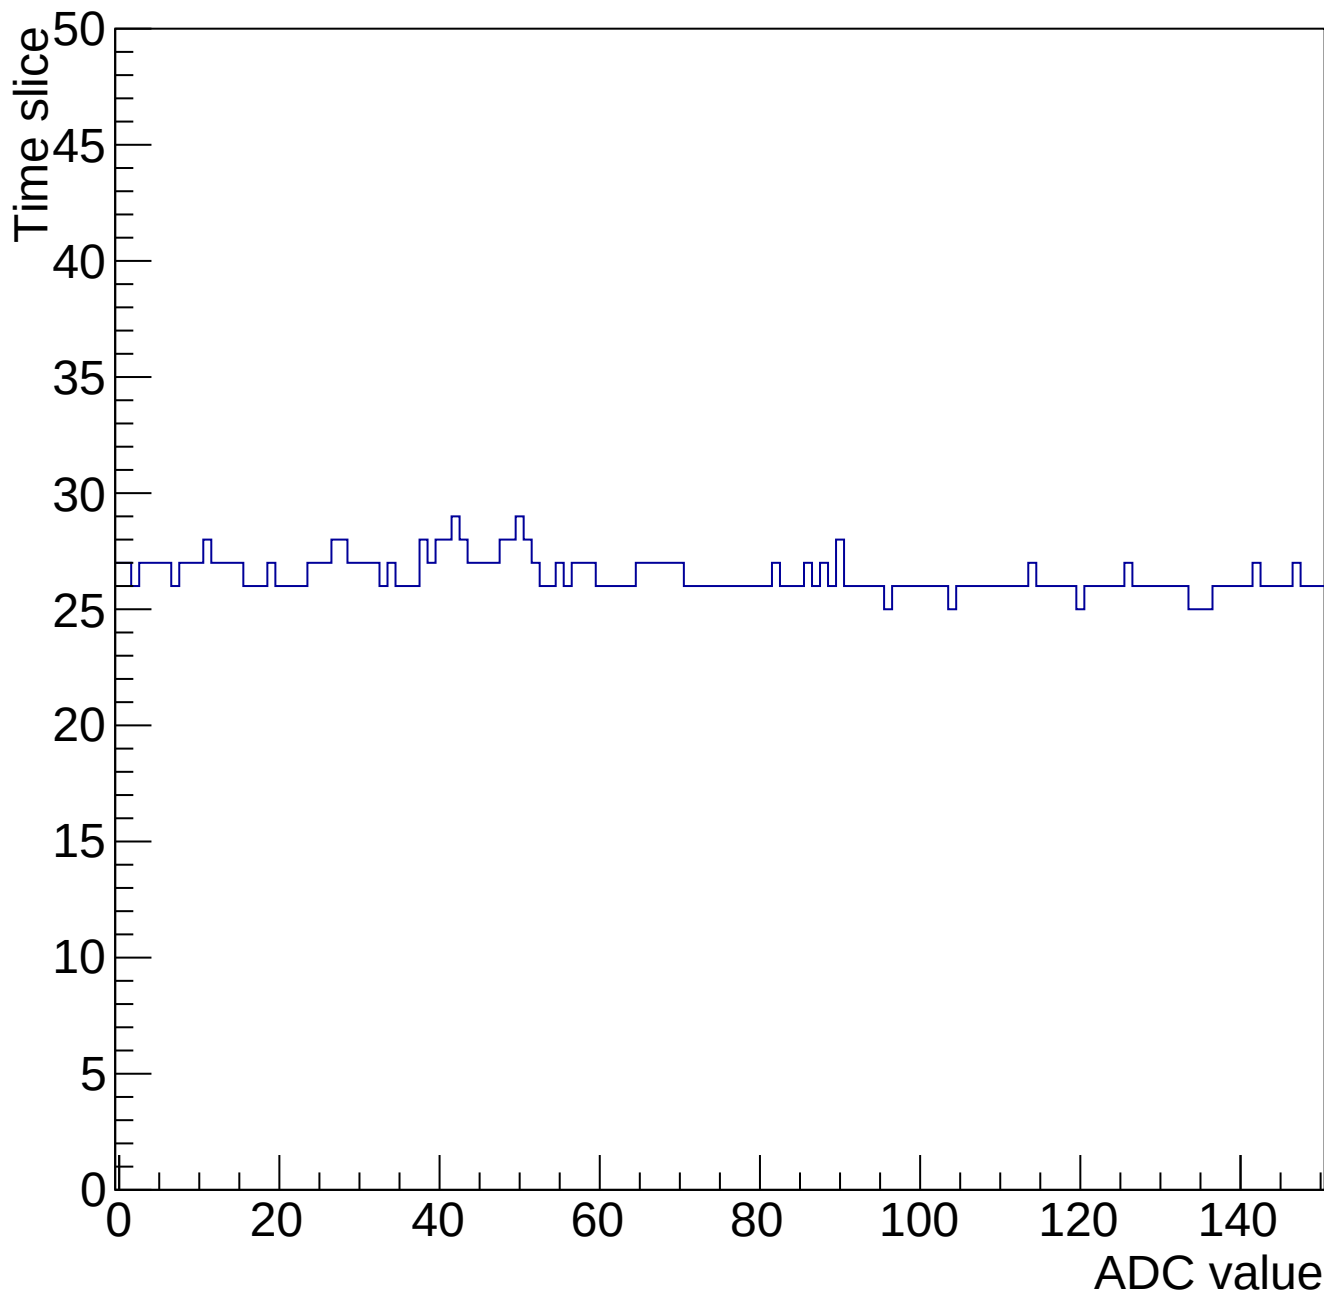


Evt 10 Time mcm 0 chip 0 chan 8 pulser-10V-wire20

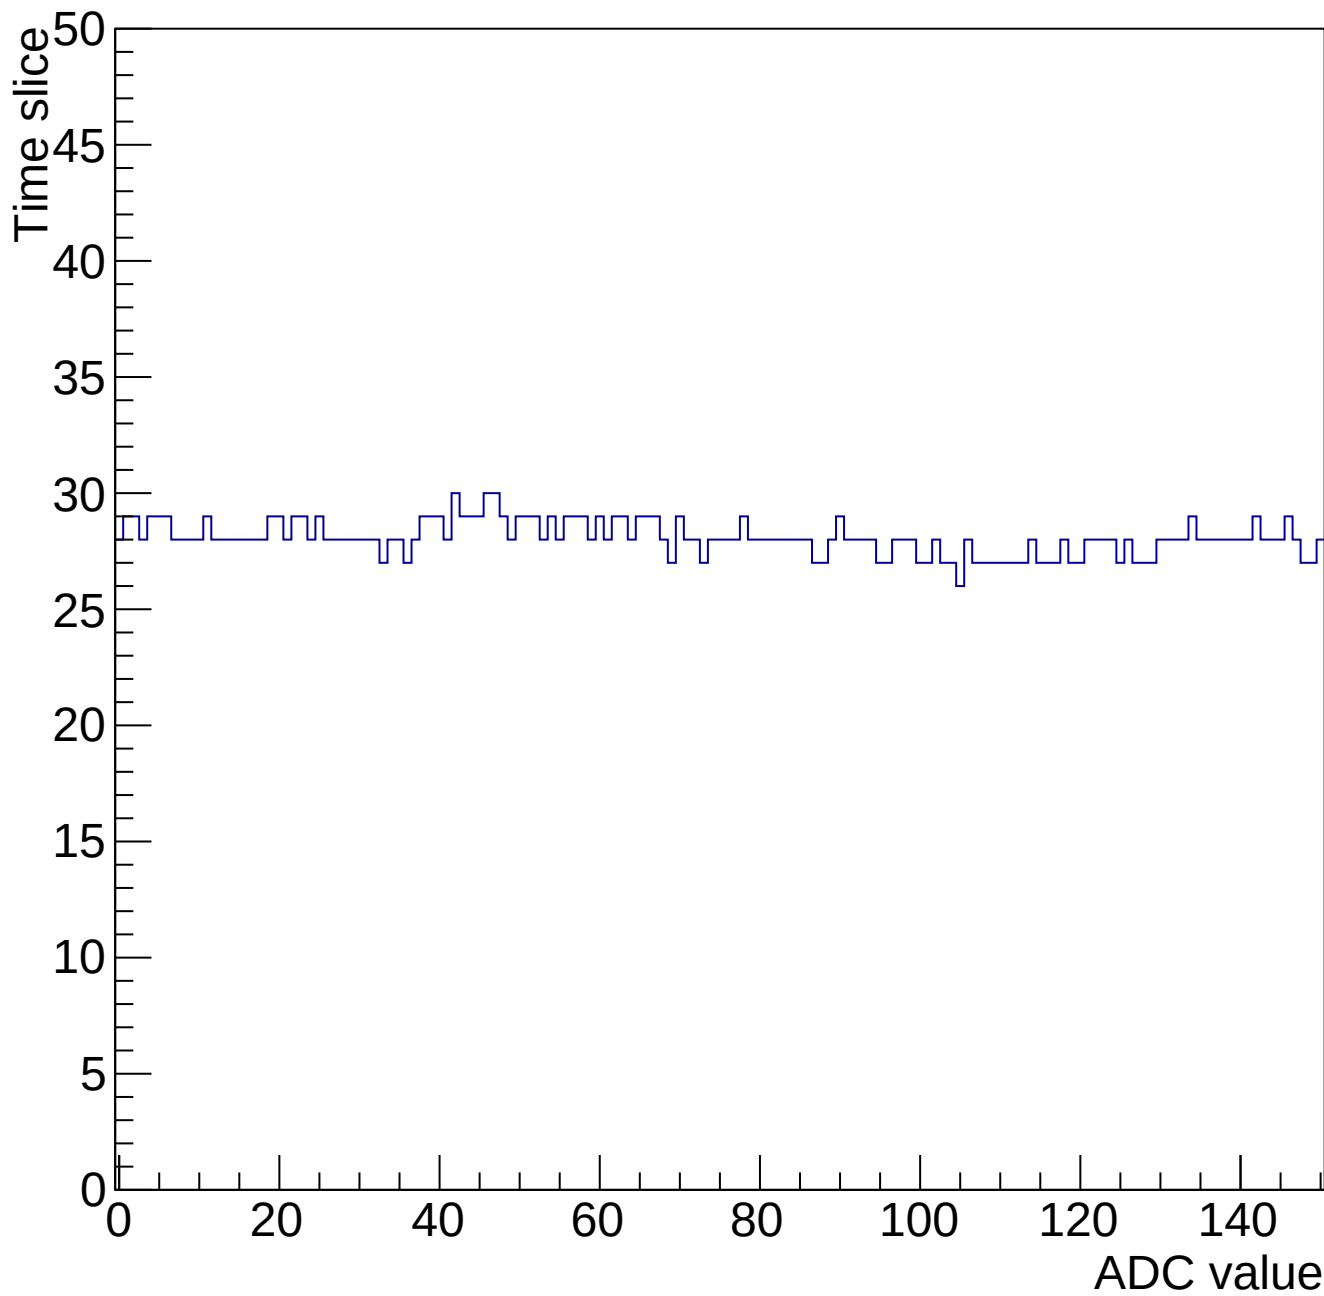


Evt 10 Time mcm 0 chip 0 chan 9 pulser-10V-wire20

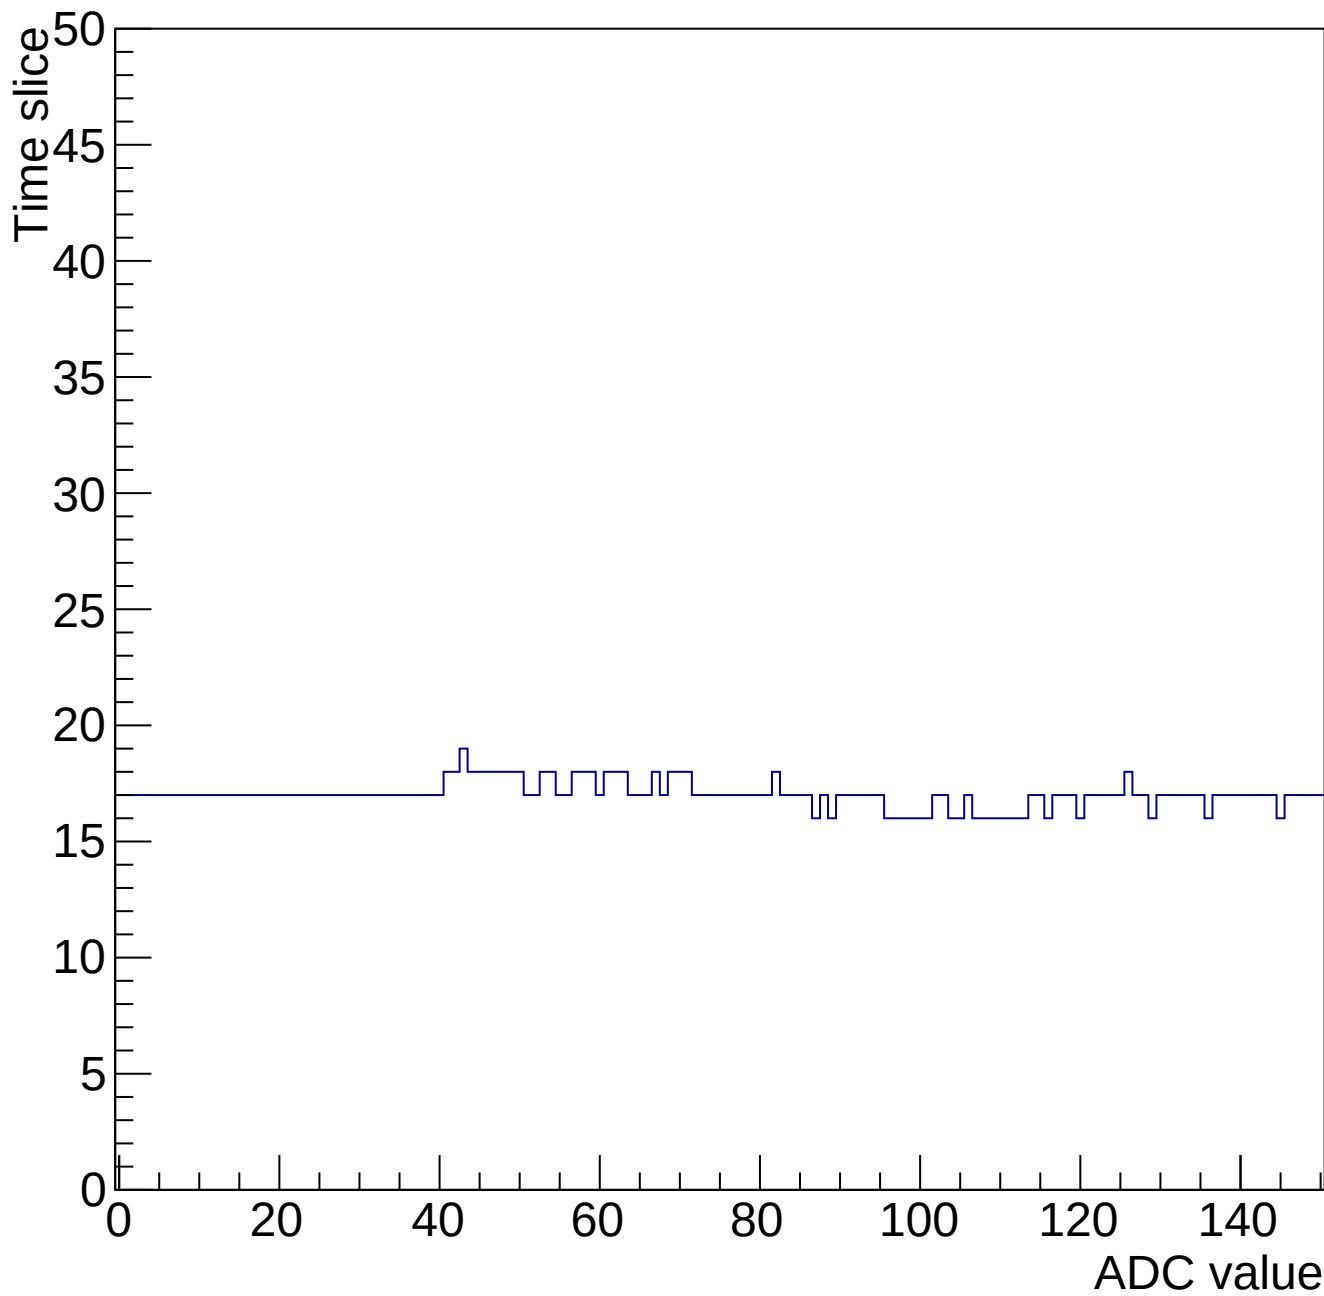


Evt 10 Time mcm 0 chip 0 chan 10 pulser-10V-wire20

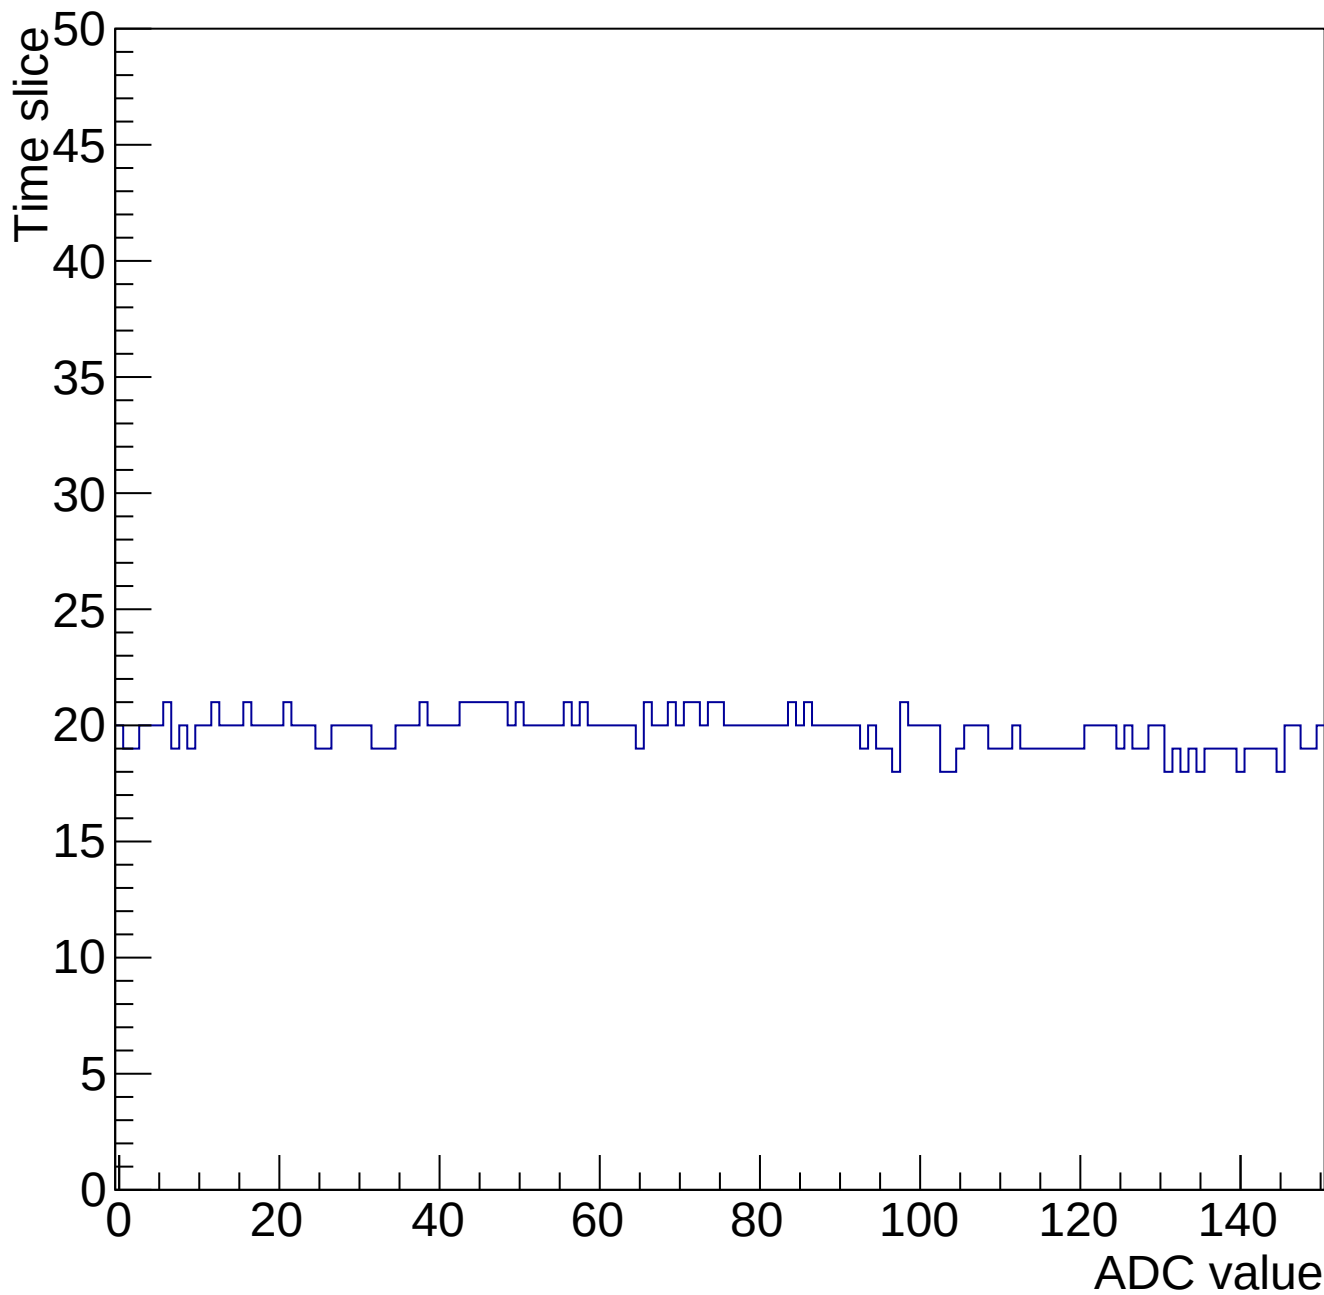


Evt 10 Time mcm 0 chip 0 chan 11 pulser-10V-wire20

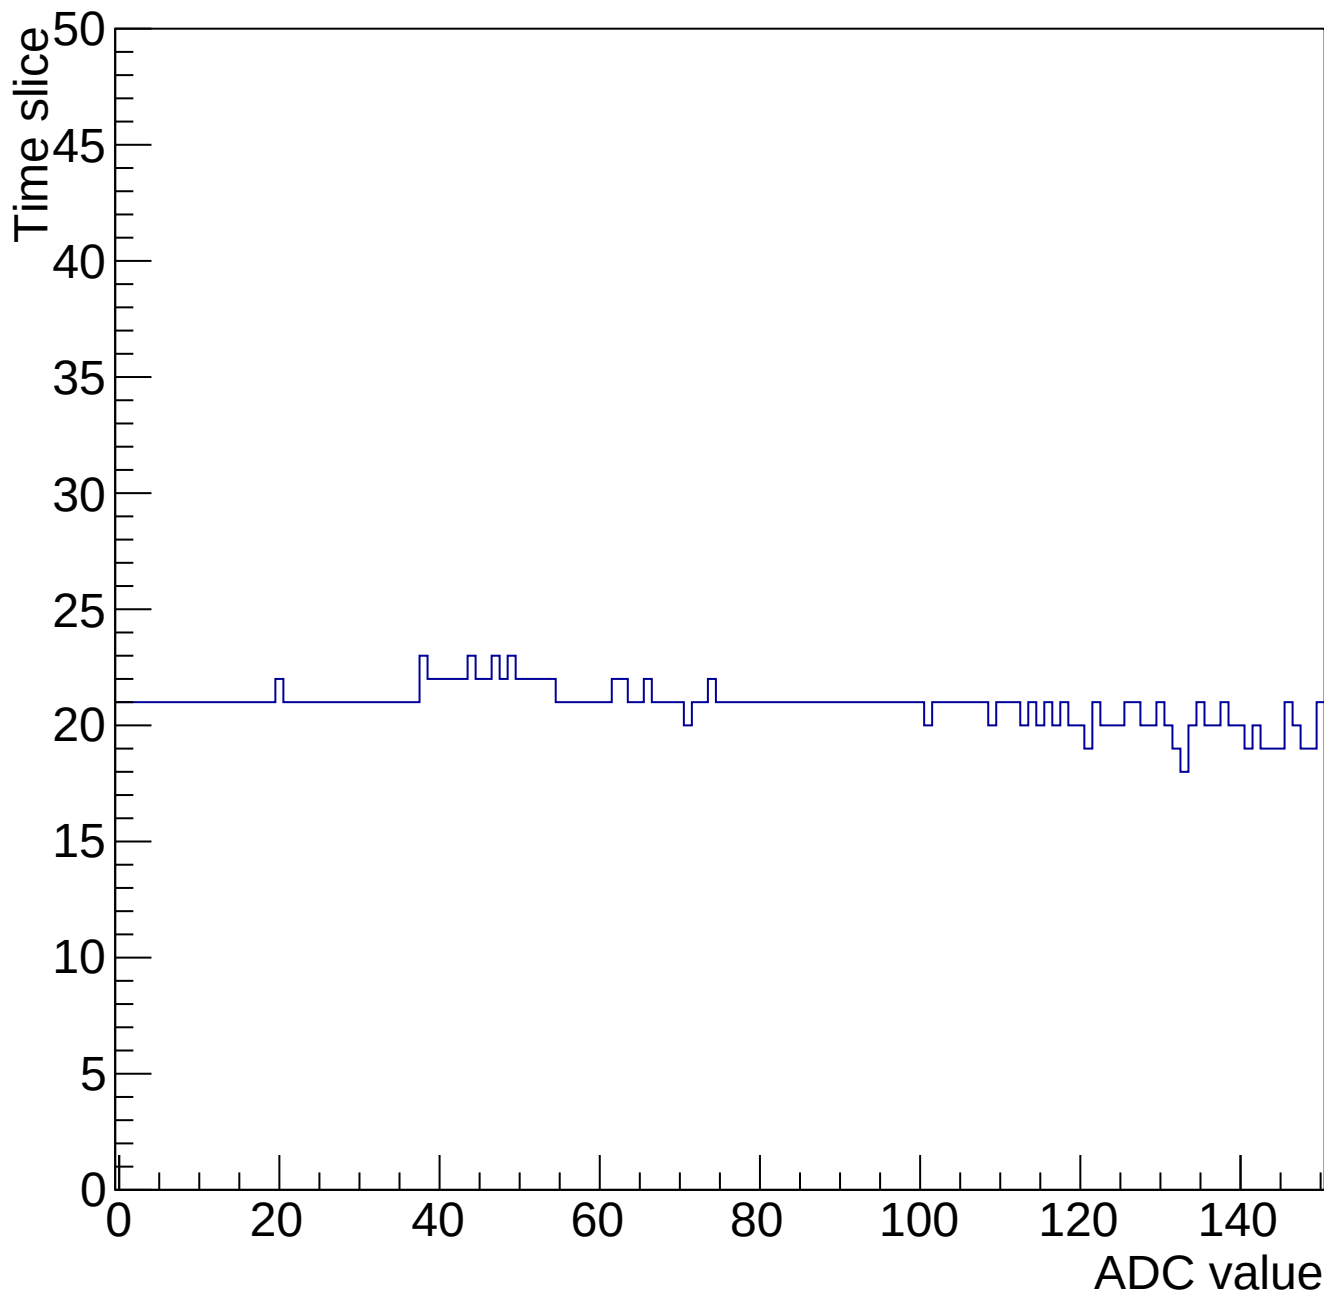


Evt 10 Time mcm 0 chip 0 chan 14 pulser-10V-wire20

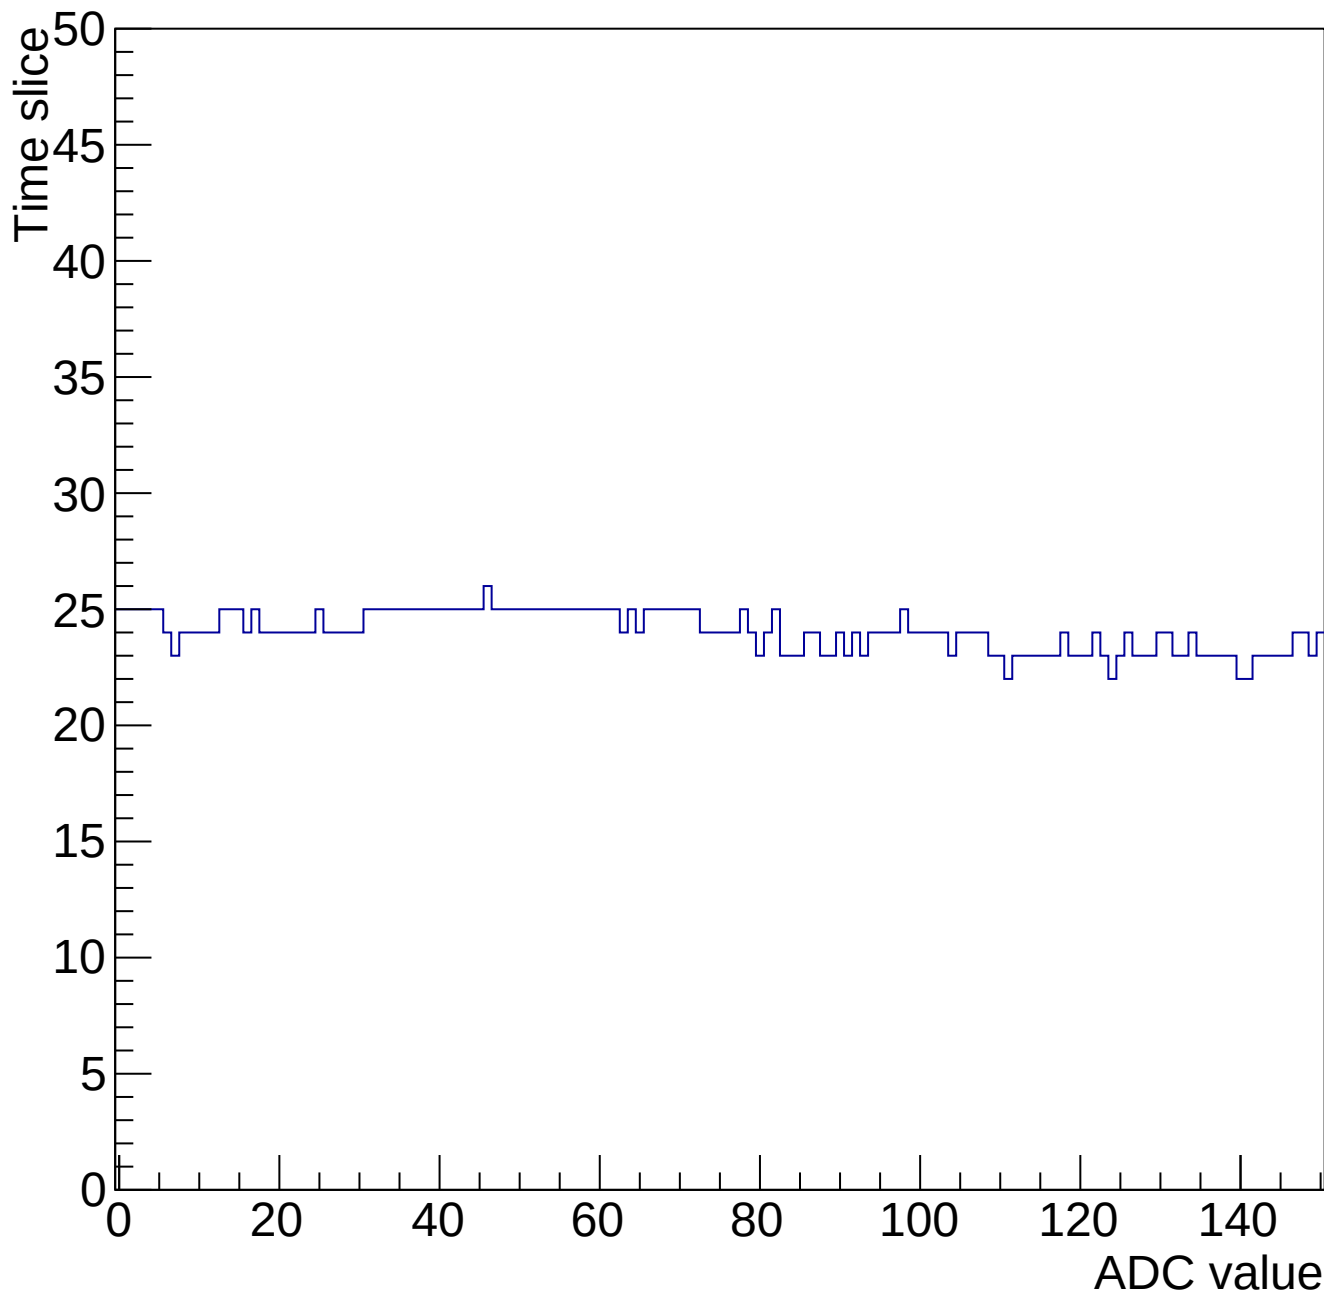

Evt 10 Time mcm 0 chip 0 chan 15 pulser-10V-wire20

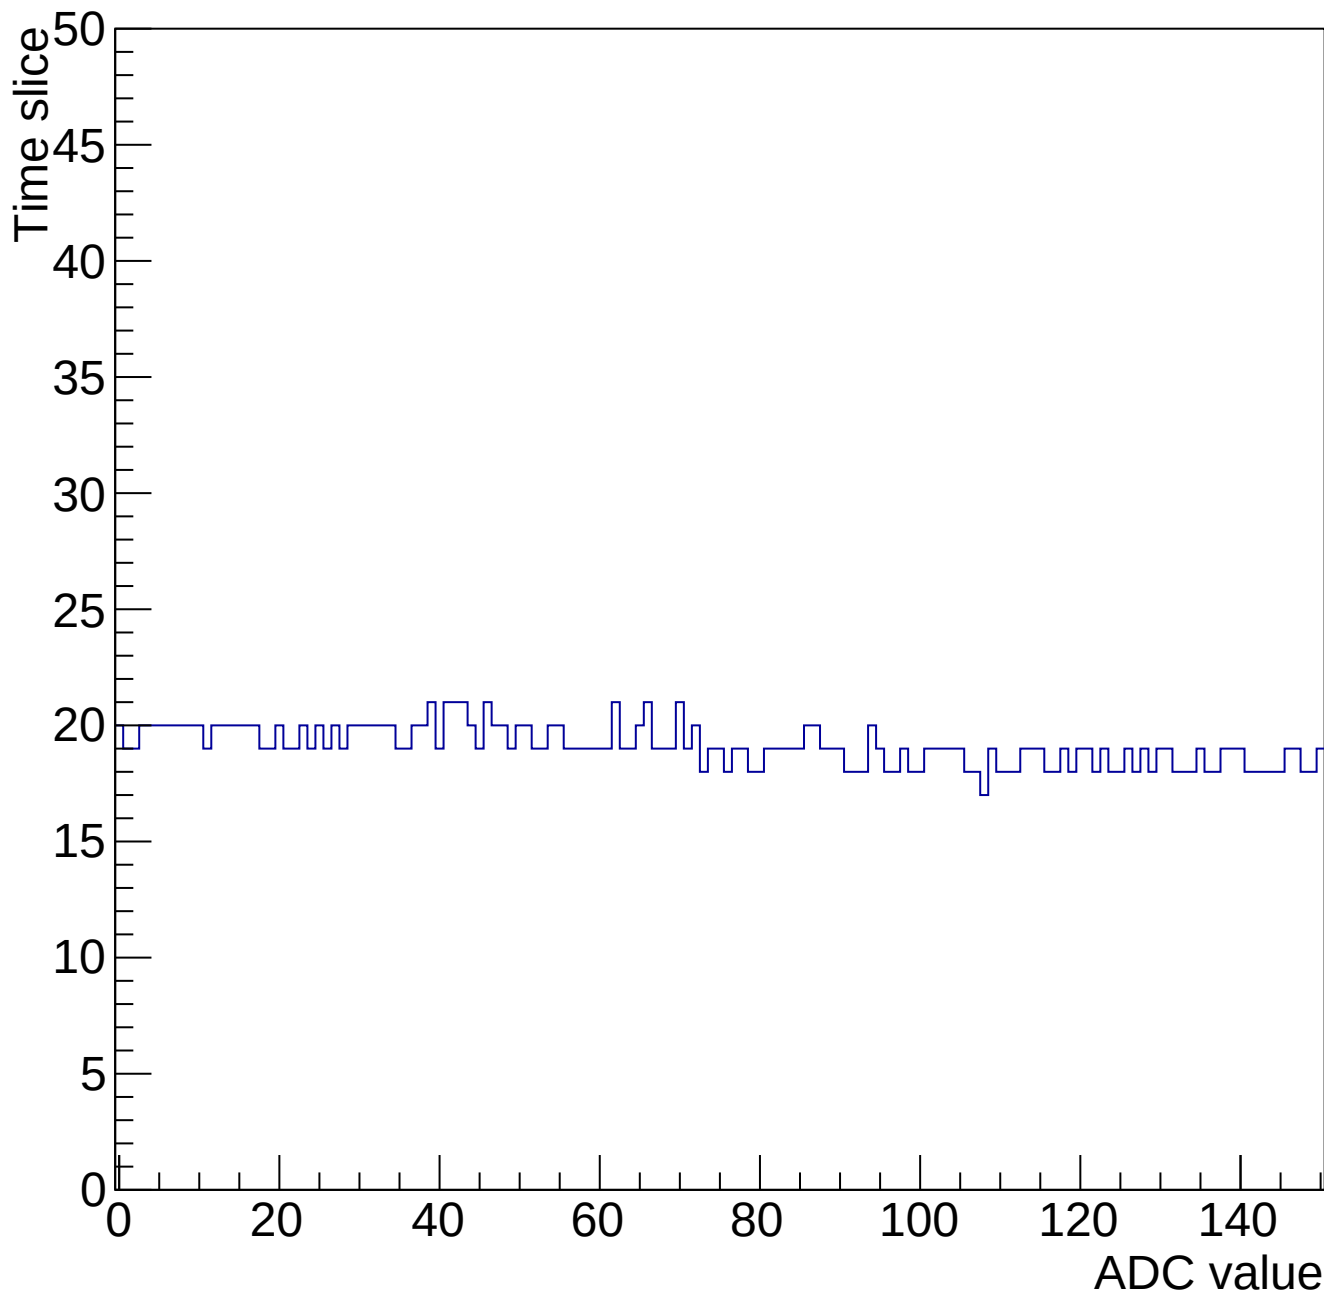

Evt 10 Time mcm 0 chip -1 chan -1 pulser-10V-wire20

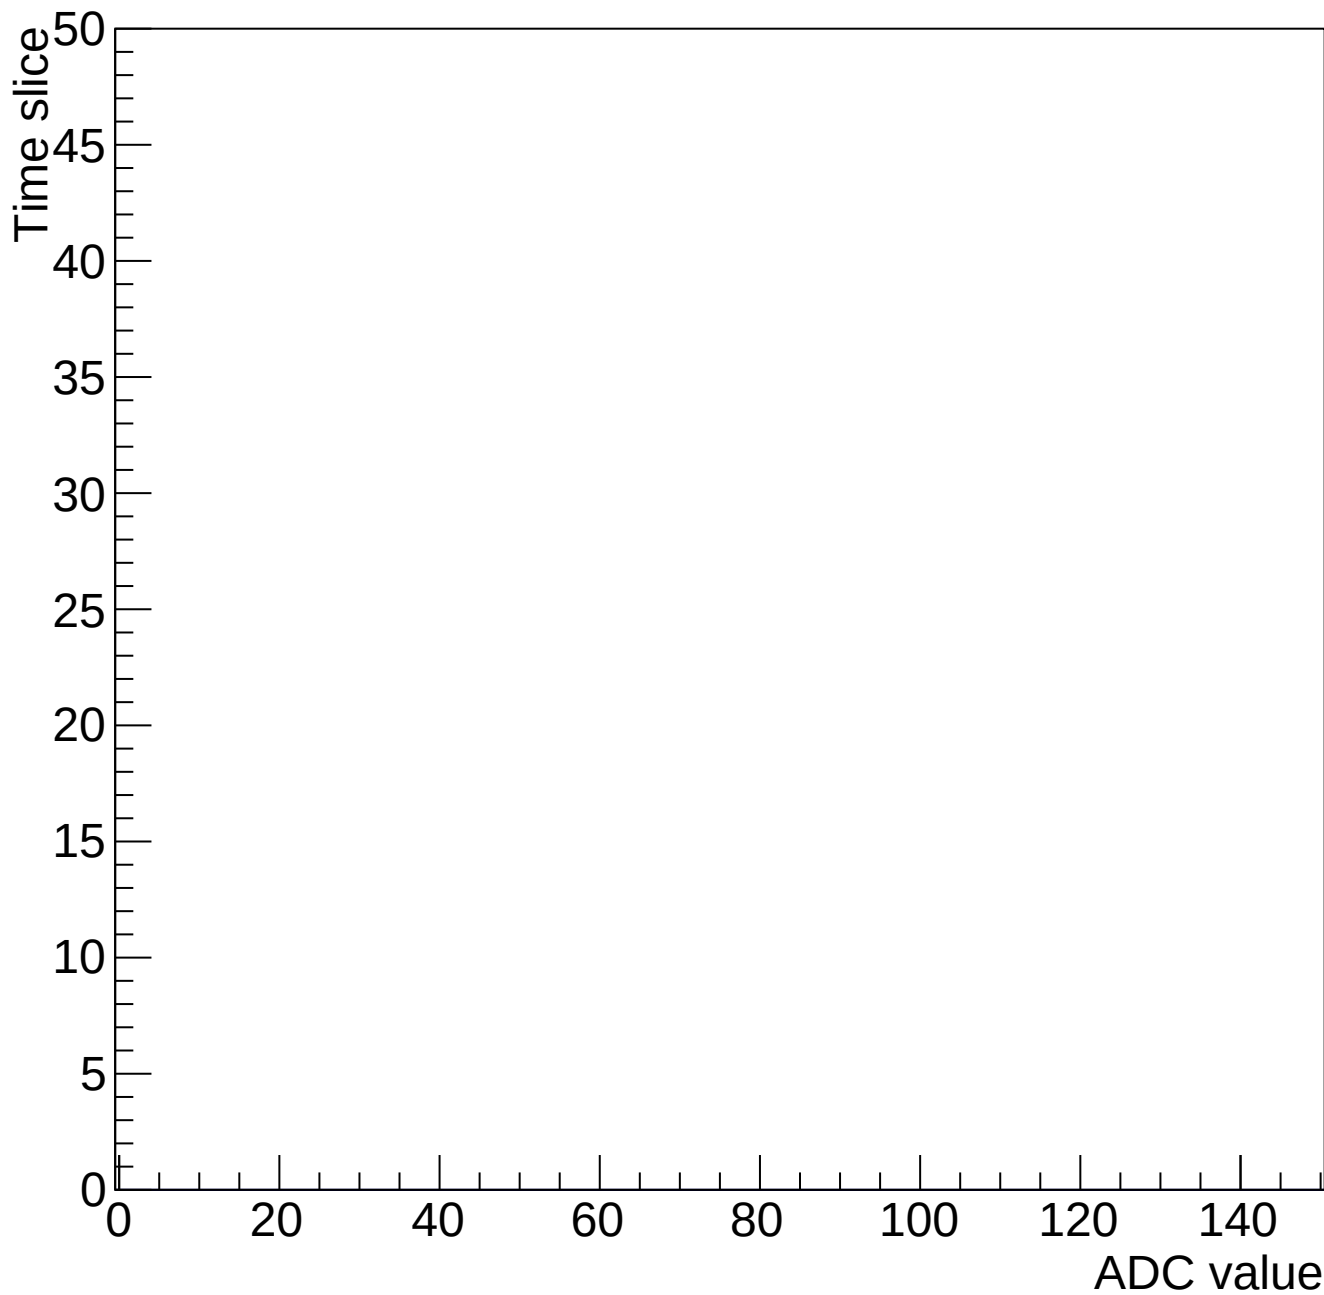

Evt 10 Time mcm 0 chip -1 chan -1 pulser-10V-wire20

