


Run 34991 Evt 10 Time mcm 2003 chip -1 chan -1 square-6V-wire20-135-gain0-shaper1

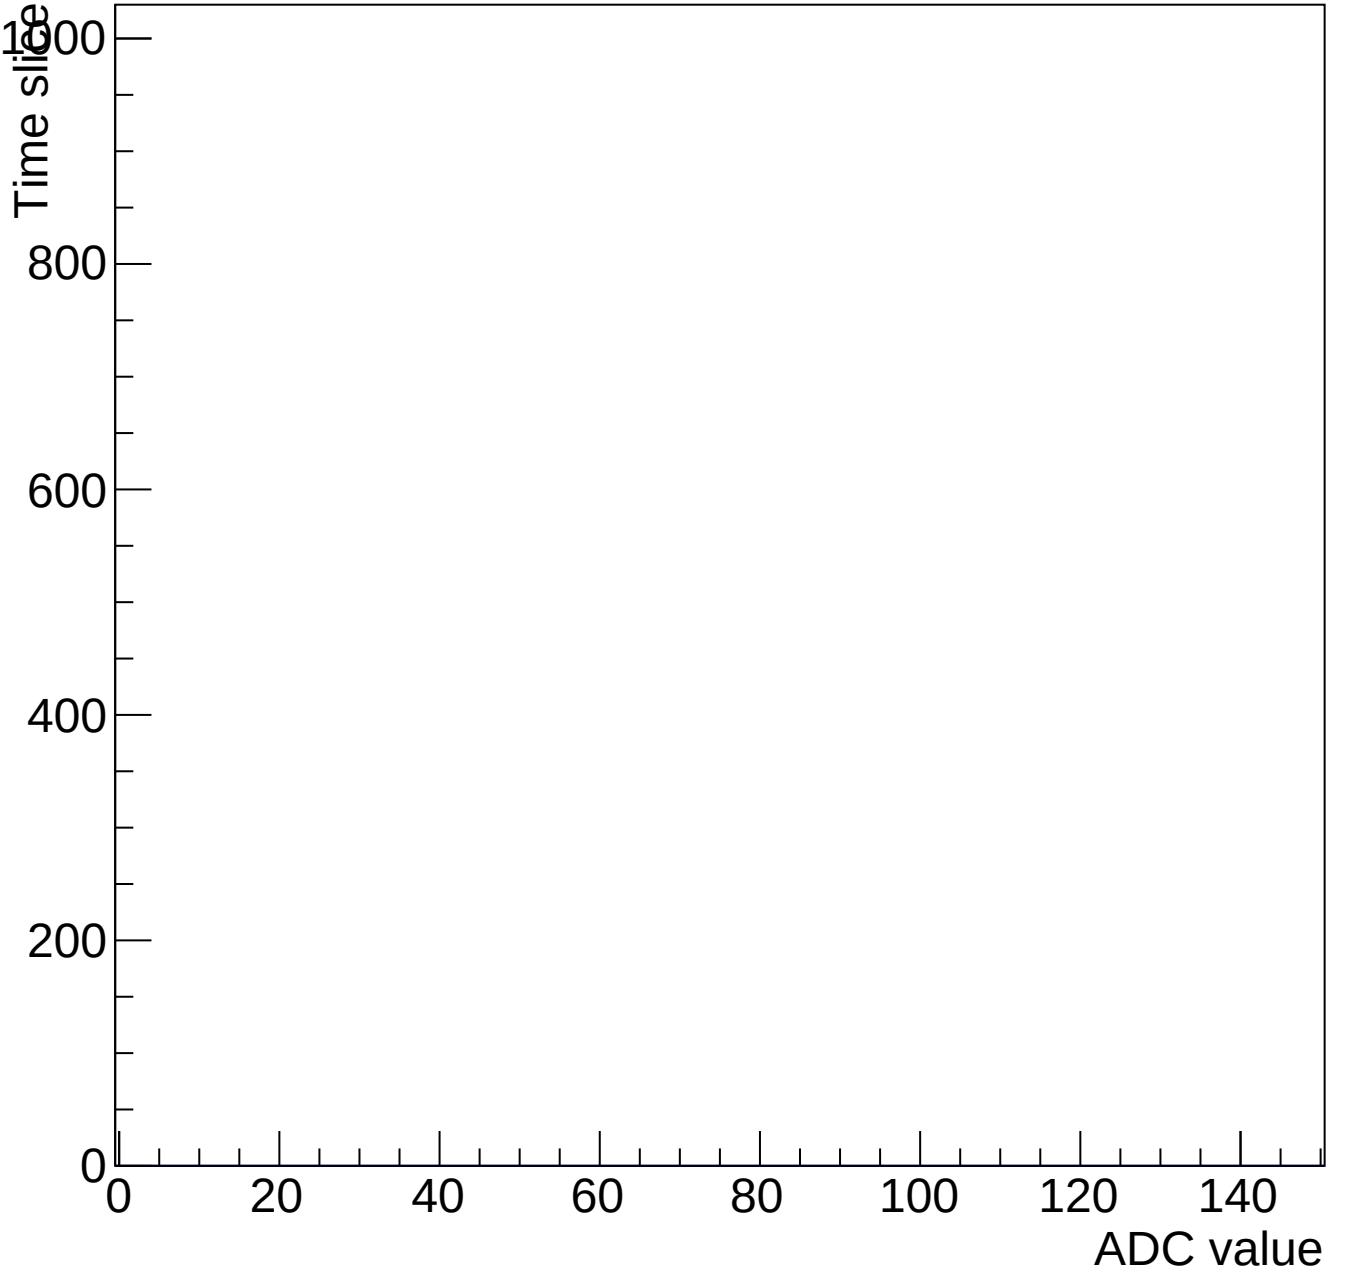


Run 34991 Evt 10 Time mcm 2003 chip -1 chan -1 square-6V-wire20-135-gain0-shaper1

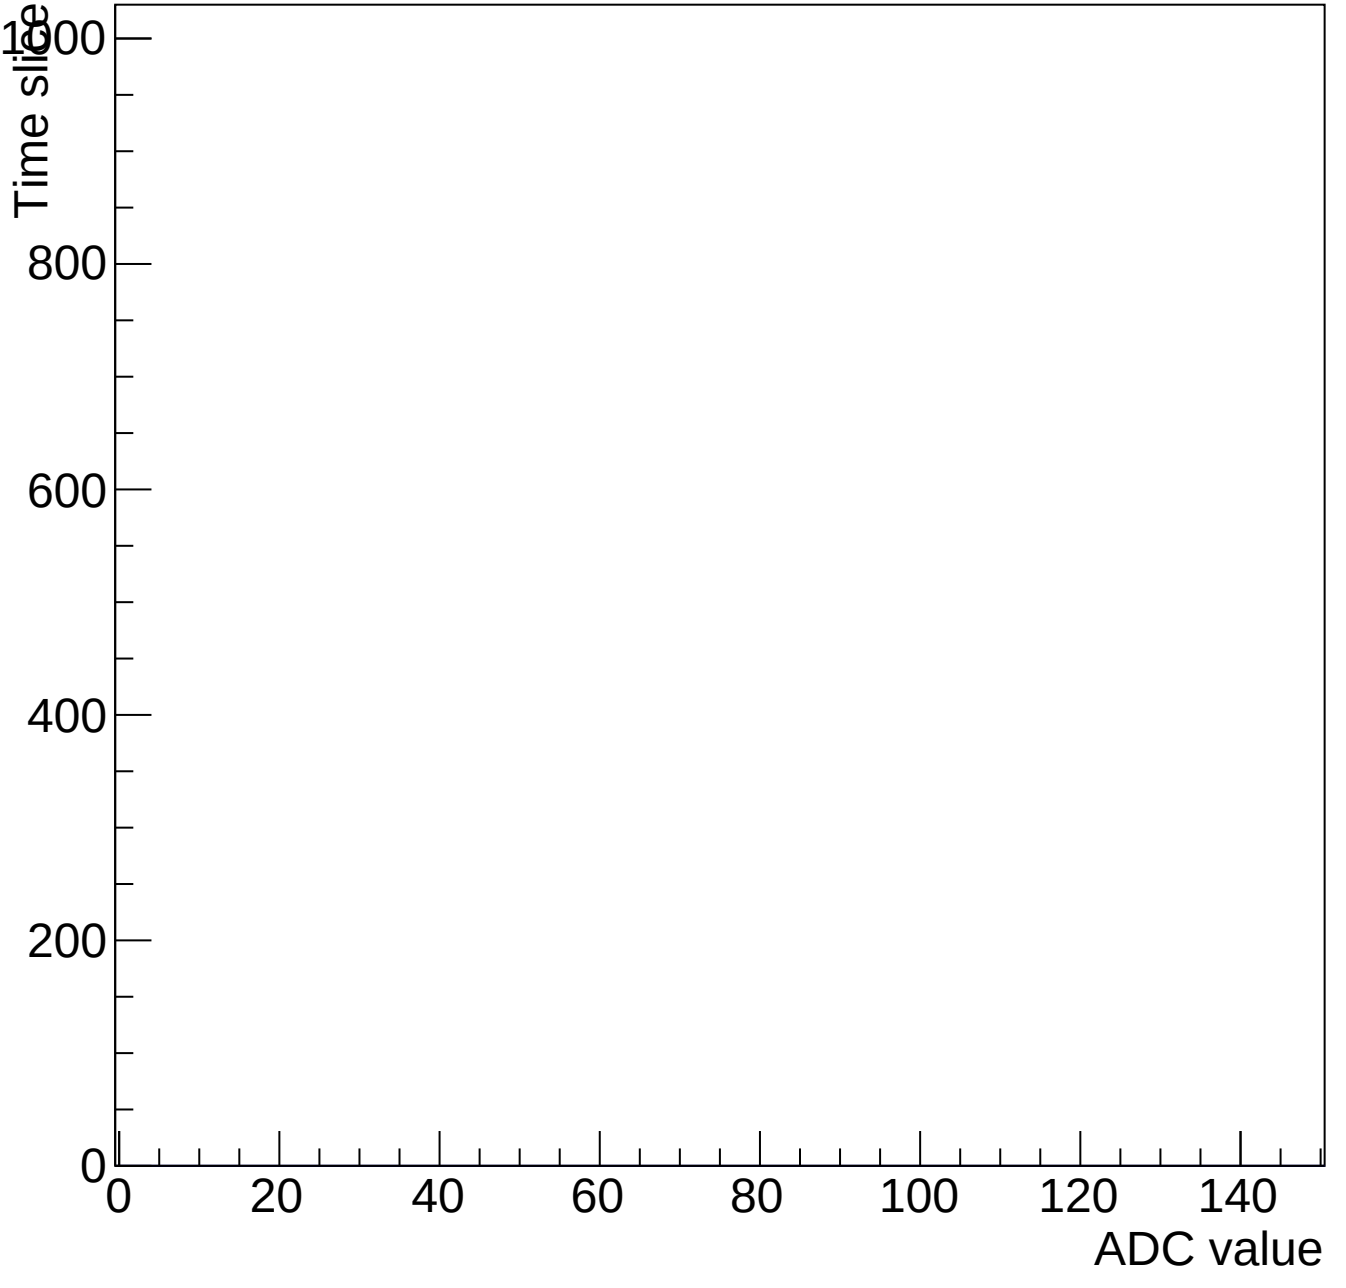


Run 34991 Evt 10 Time mcm 2003 chip -1 chan -1 square-6V-wire20-135-gain0-shaper1

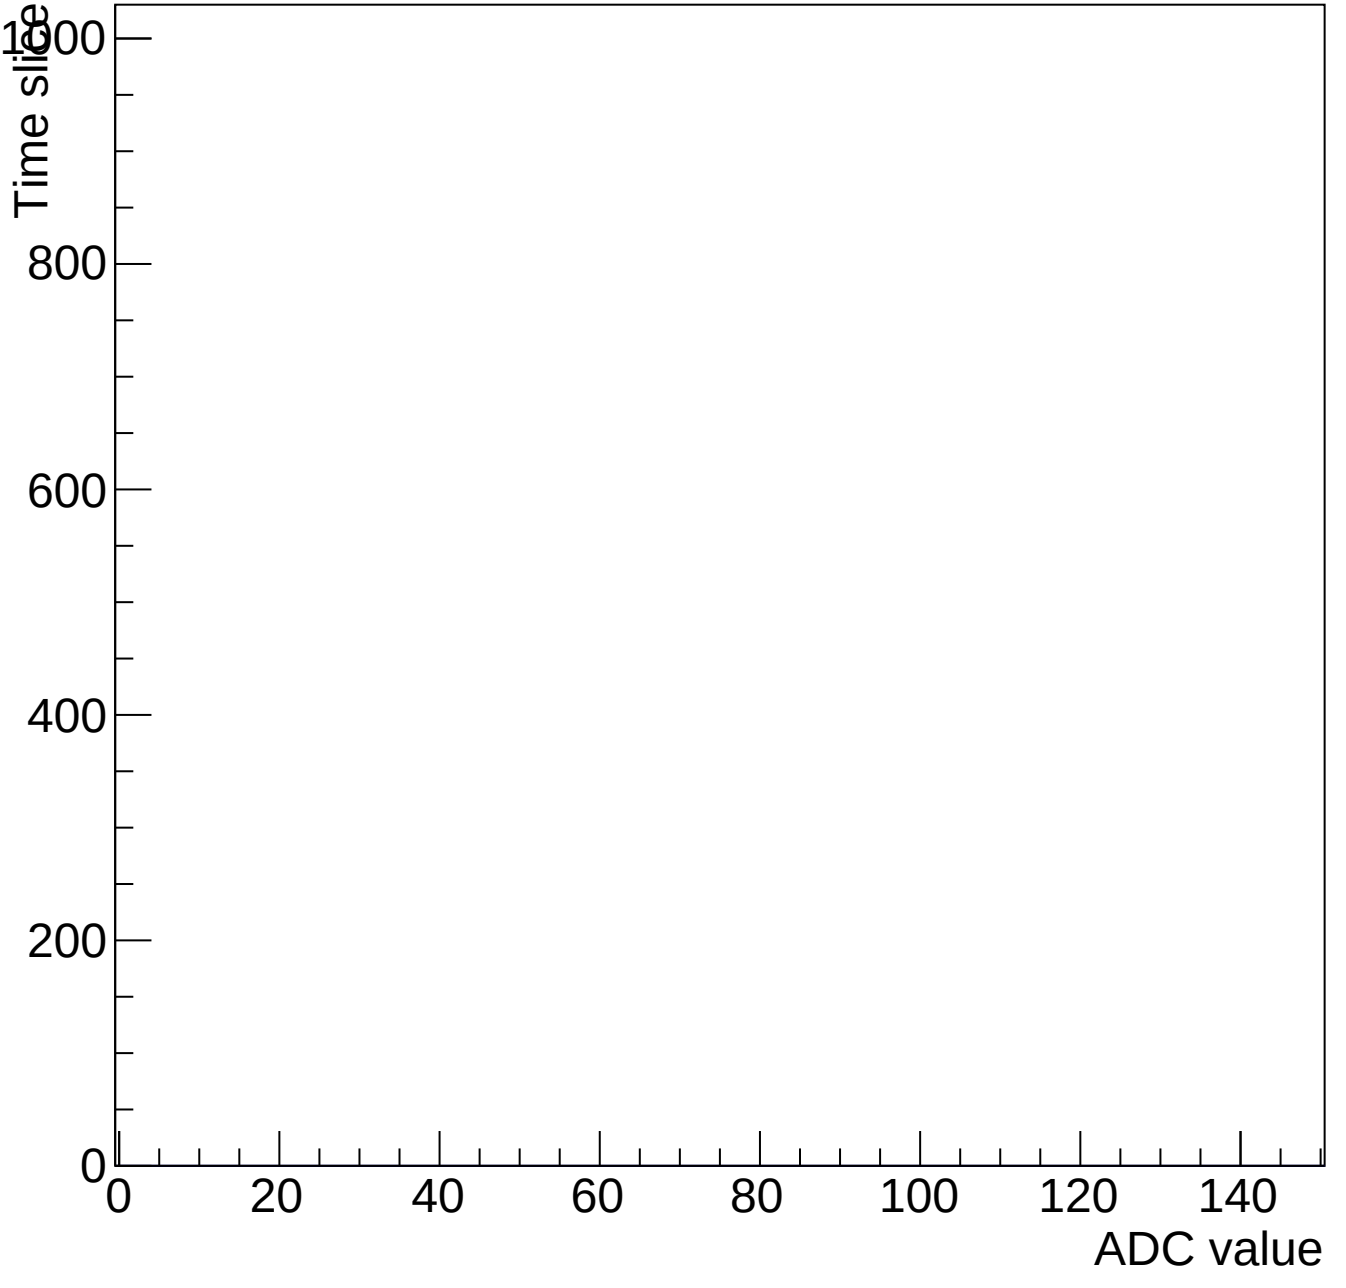


Run 34991 Evt 10 Time mcm 2003 chip -1 chan -1 square-6V-wire20-135-gain0-shaper1

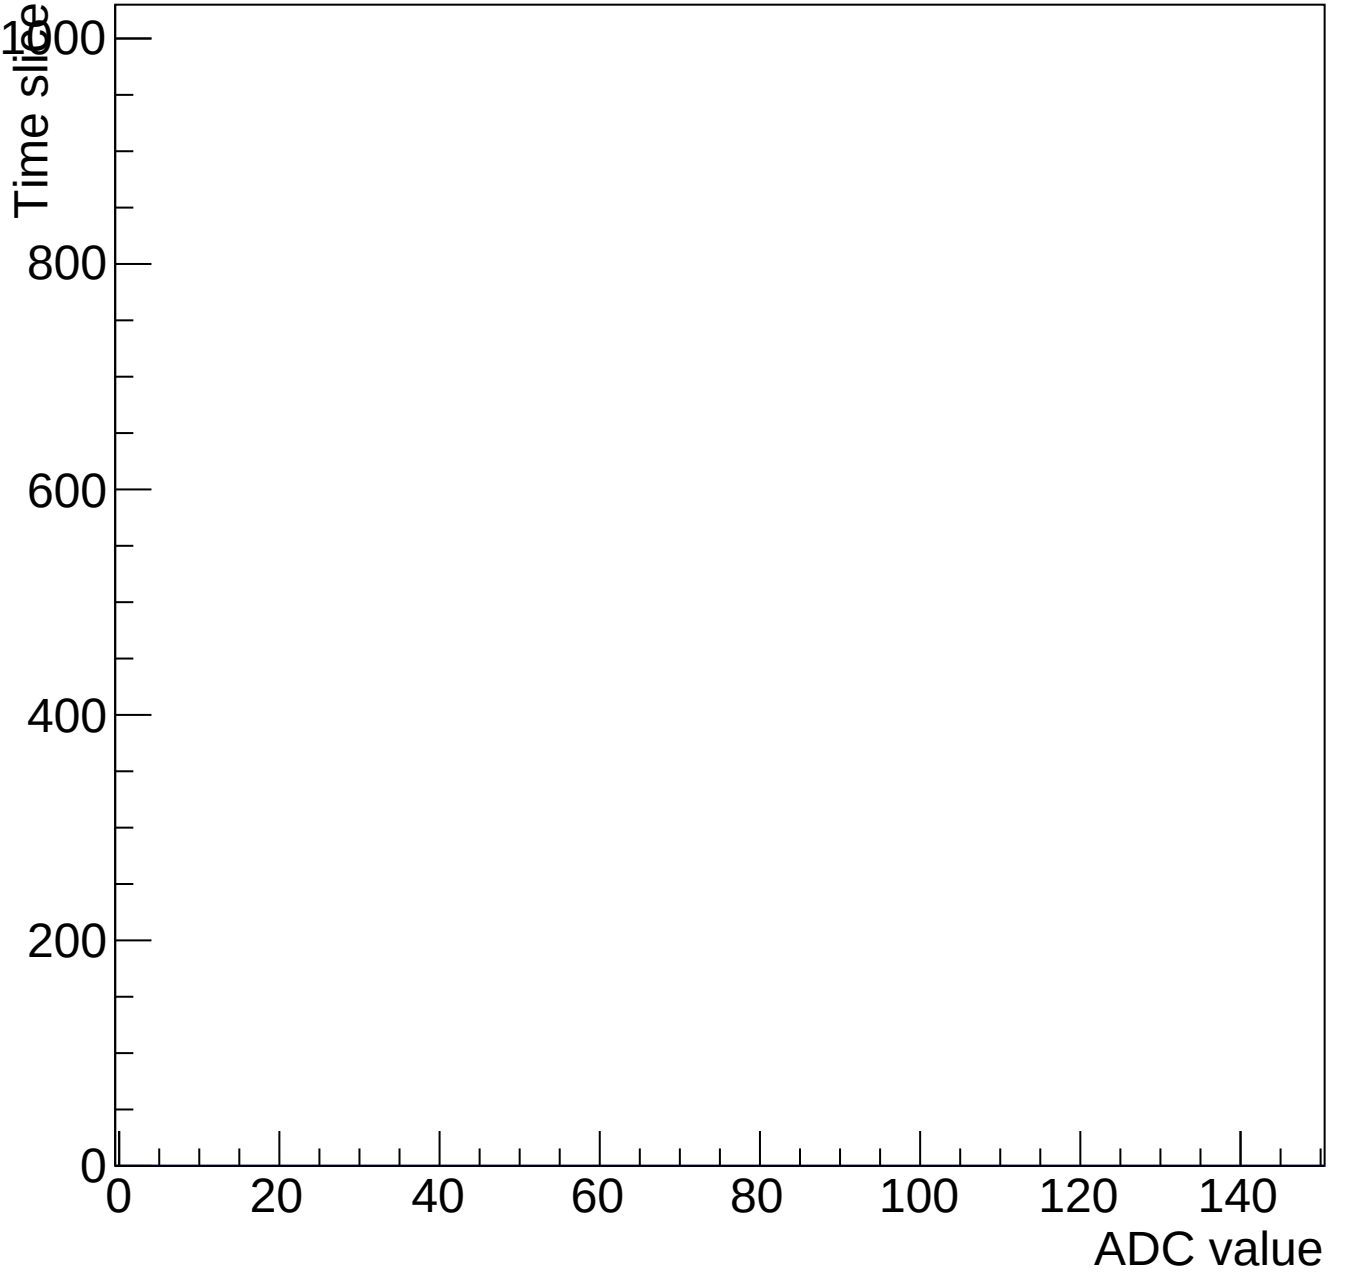


Run 34991 Evt 10 Time mcm 2003 chip -1 chan -1 square-6V-wire20-135-gain0-shaper1

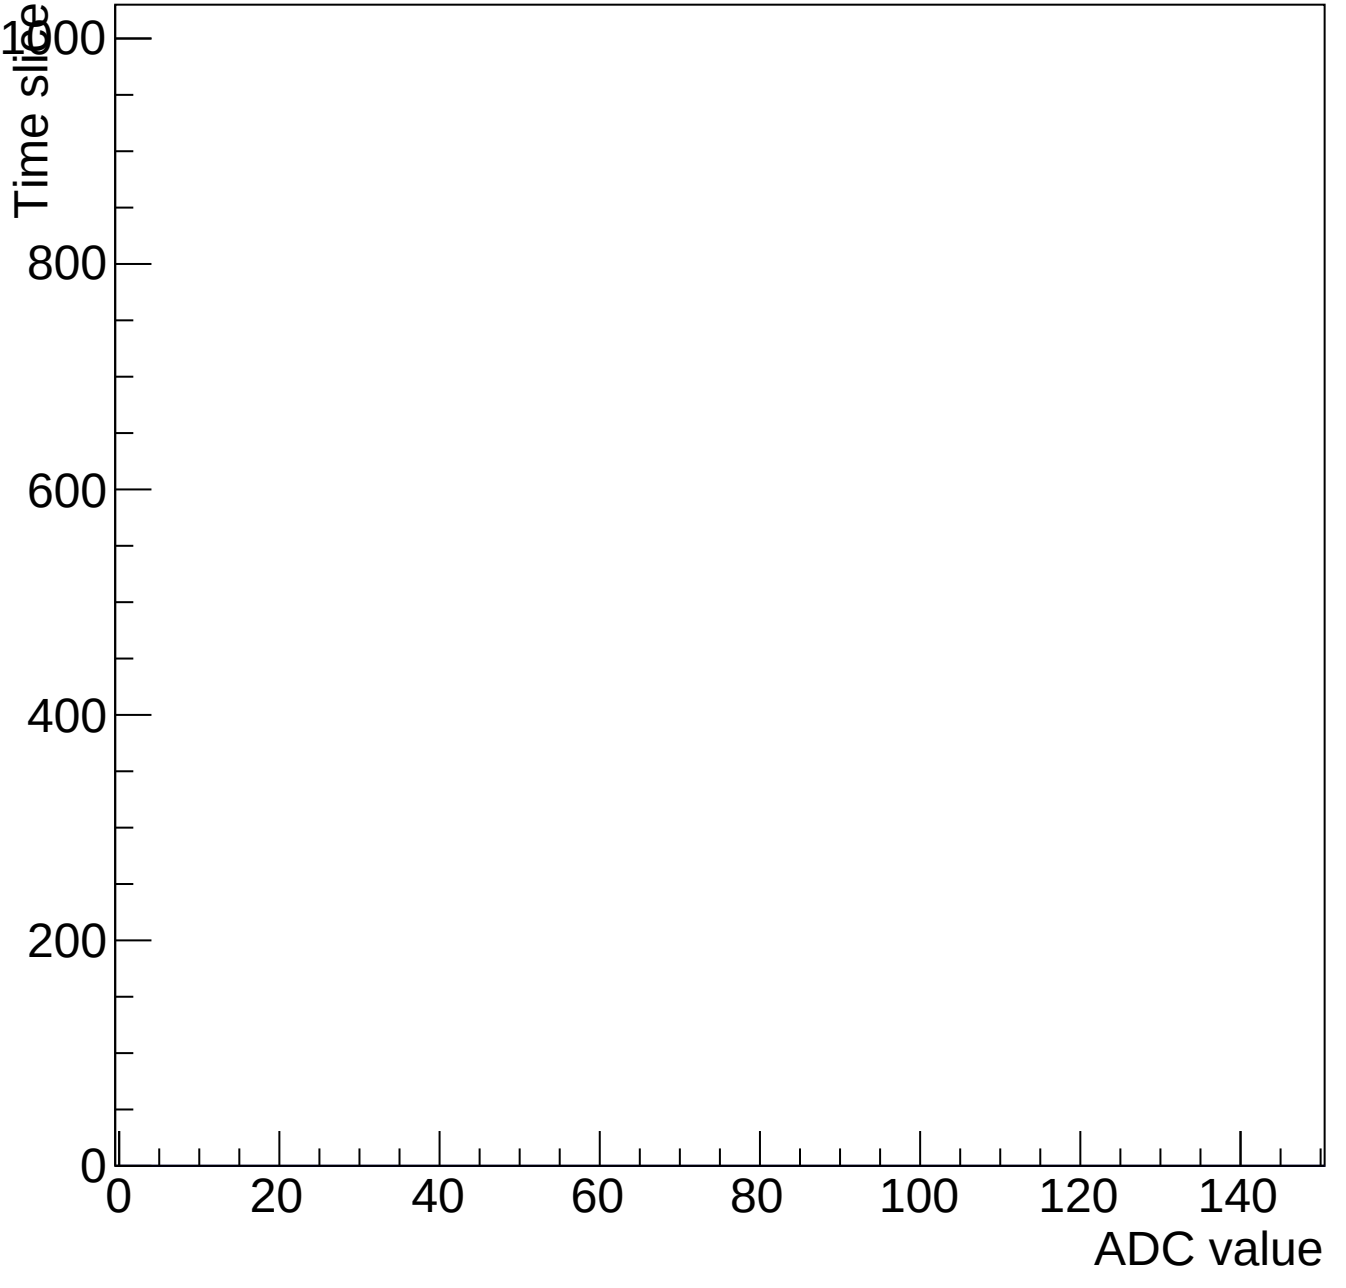


Run 34991 Evt 10 Time mcm 2003 chip -1 chan -1 square-6V-wire20-135-gain0-shaper1

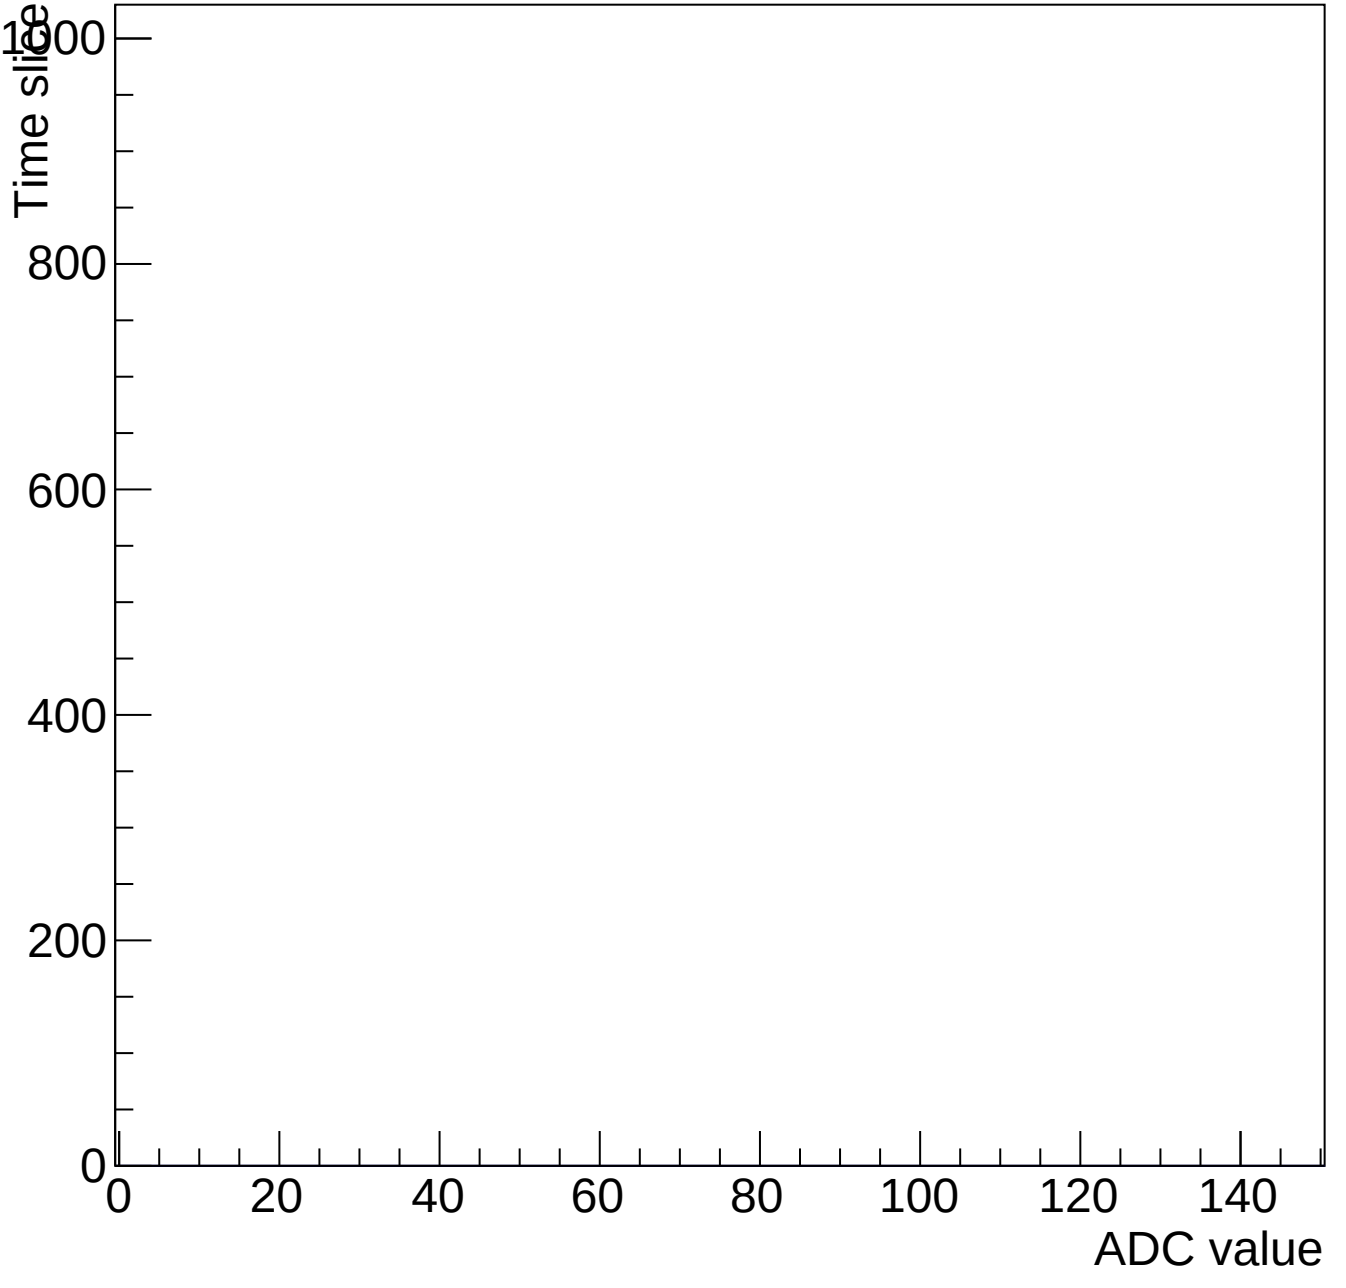


Run 34991 Evt 10 Time mcm 2003 chip -1 chan -1 square-6V-wire20-135-gain0-shaper1

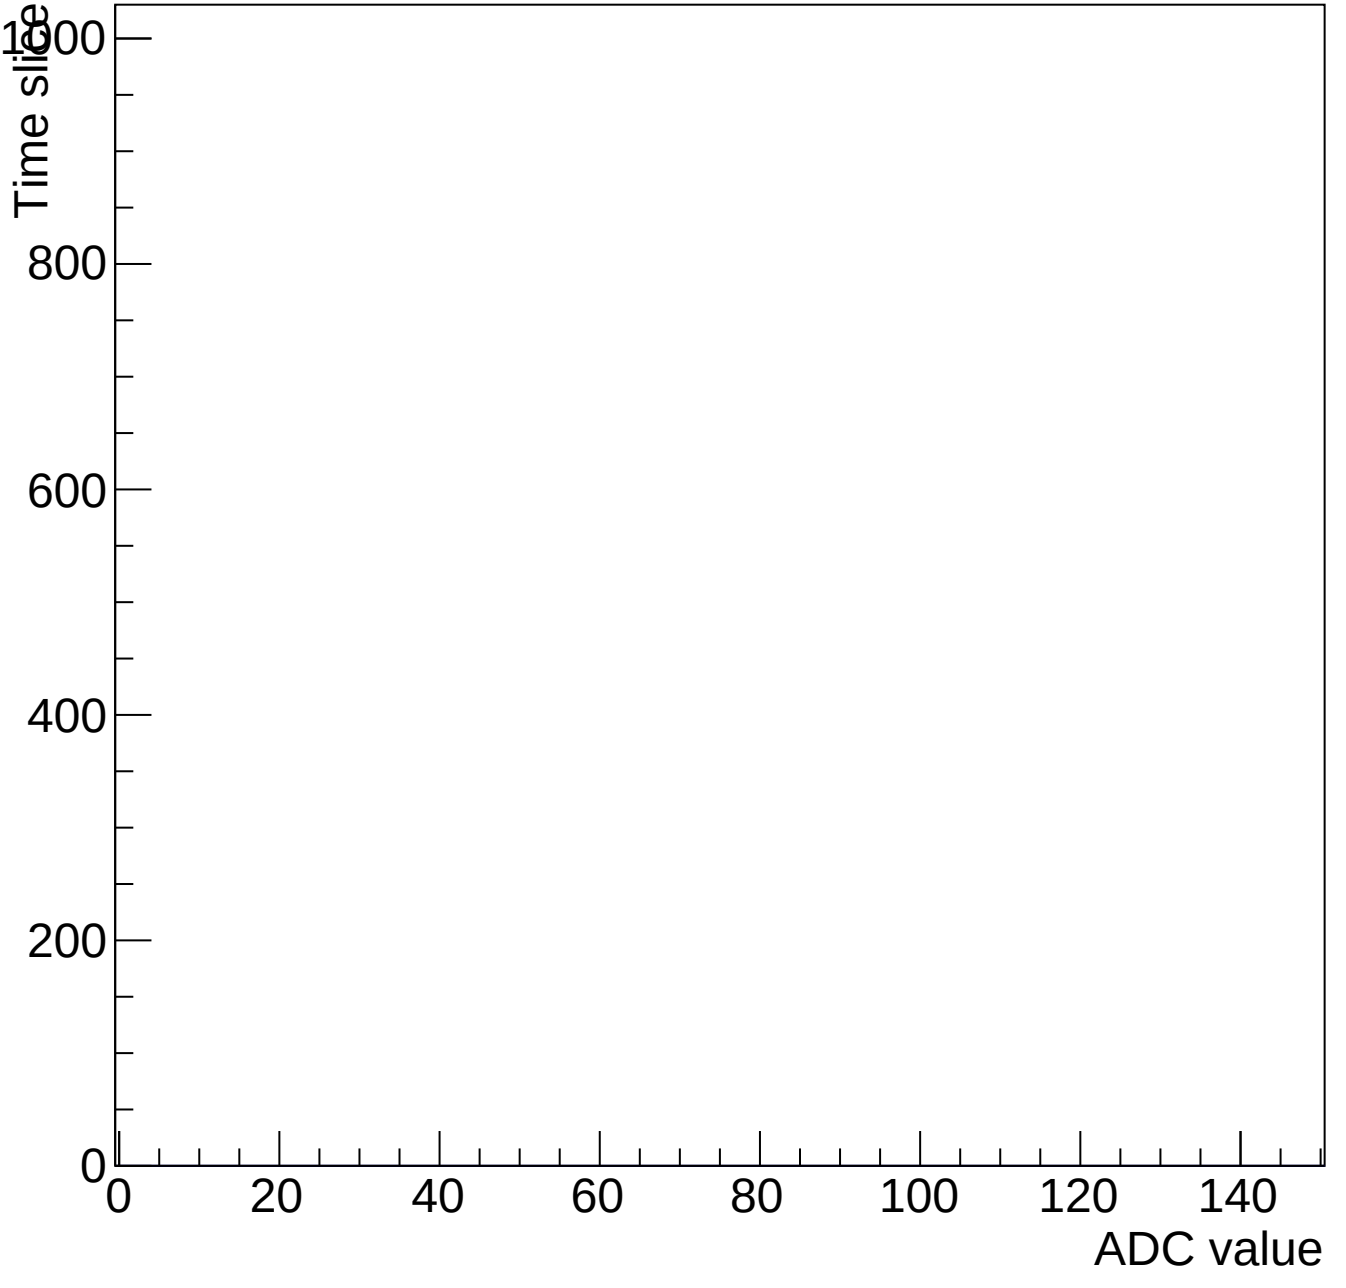


Run 34991 Evt 10 Time mcm 2003 chip -1 chan -1 square-6V-wire20-135-gain0-shaper1

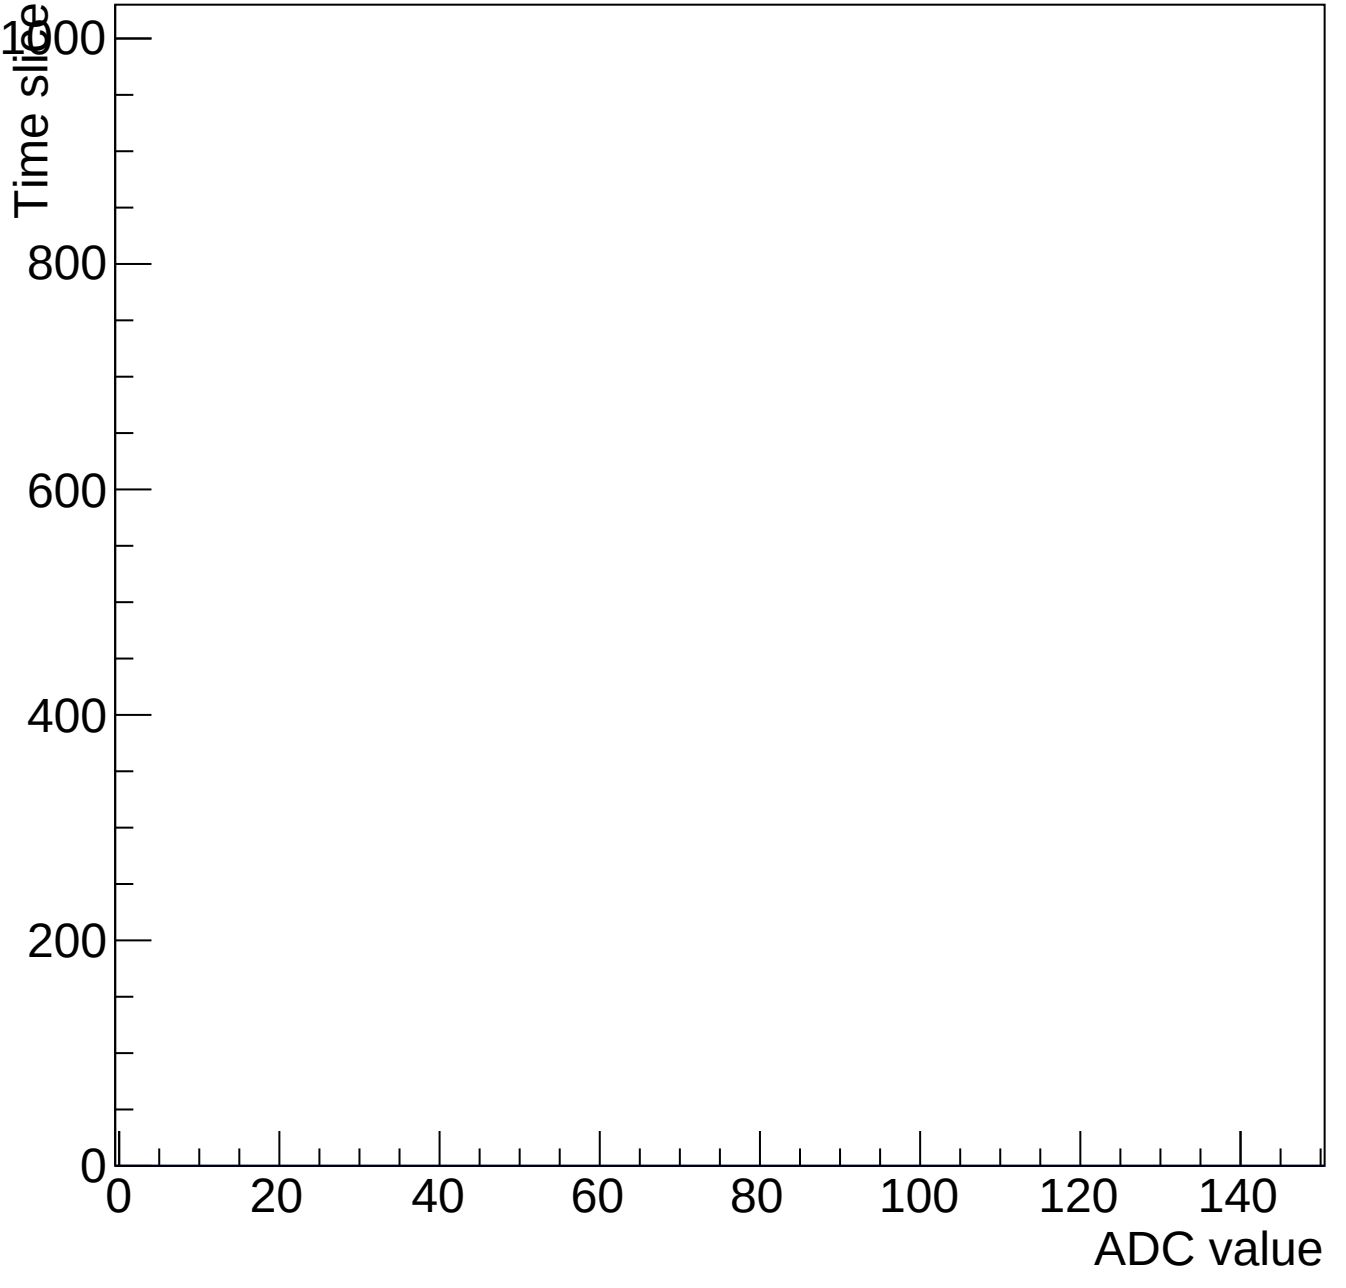


Run 34991 Evt 10 Time mcm 2003 chip -1 chan -1 square-6V-wire20-135-gain0-shaper1

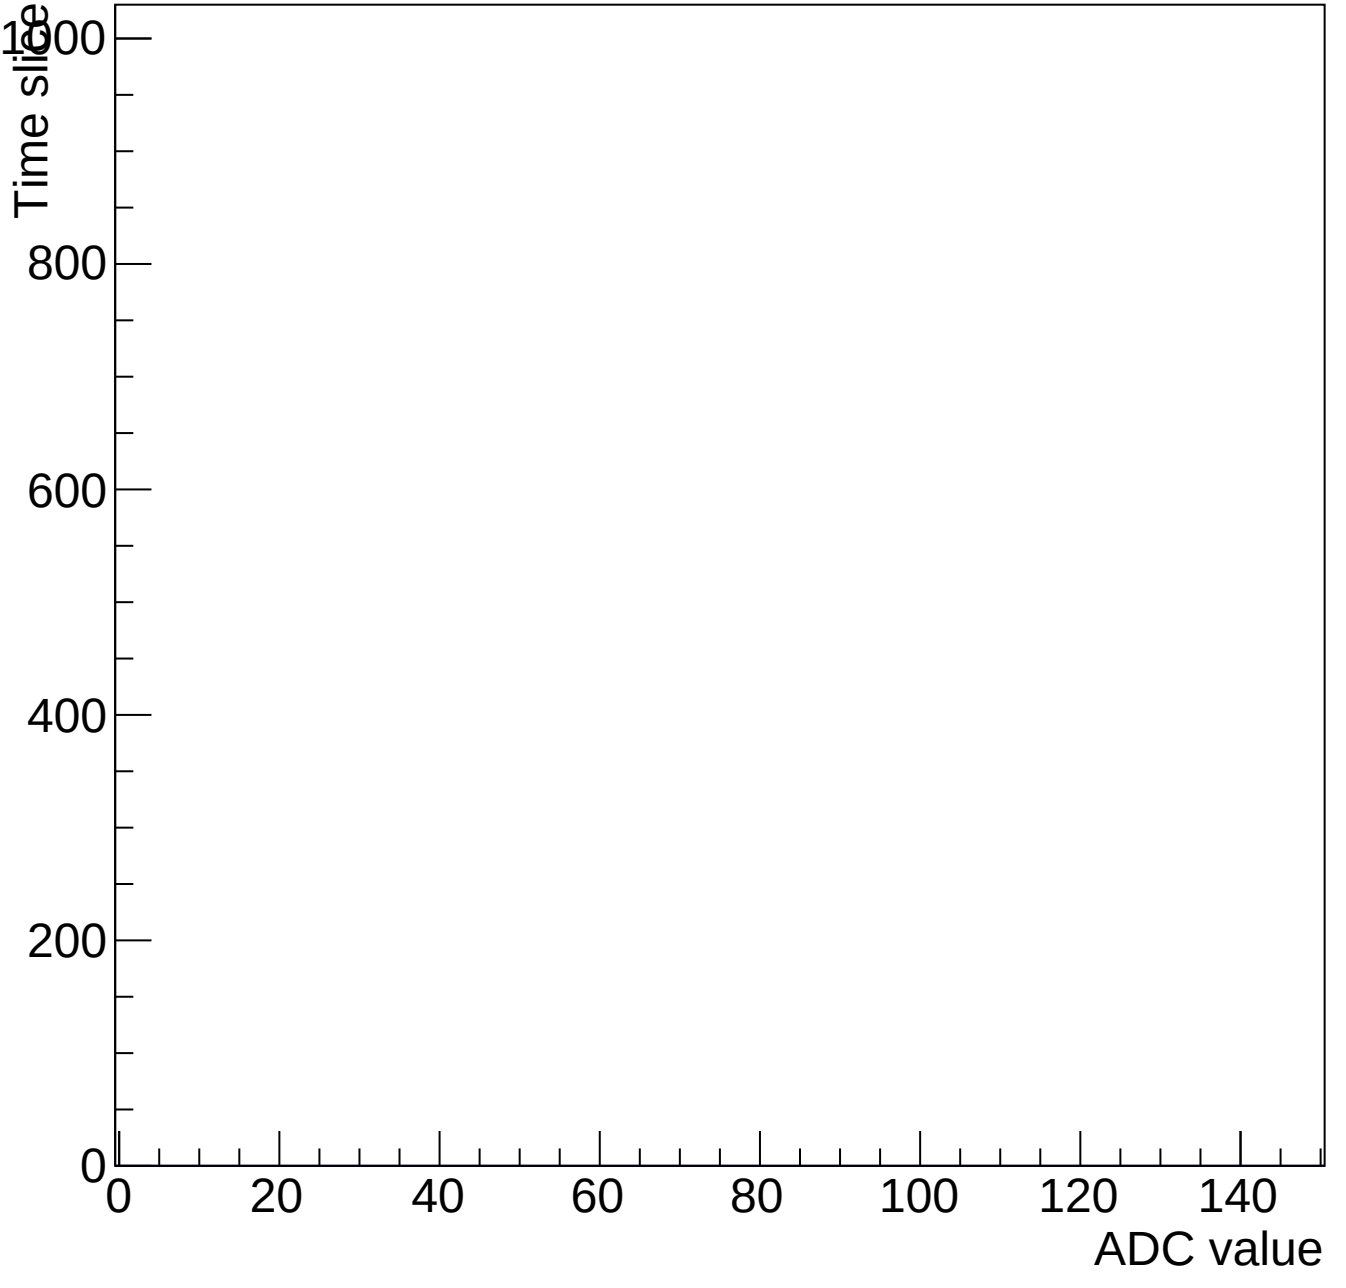


Run 34991 Evt 10 Time mcm 2003 chip -1 chan -1 square-6V-wire20-135-gain0-shaper1

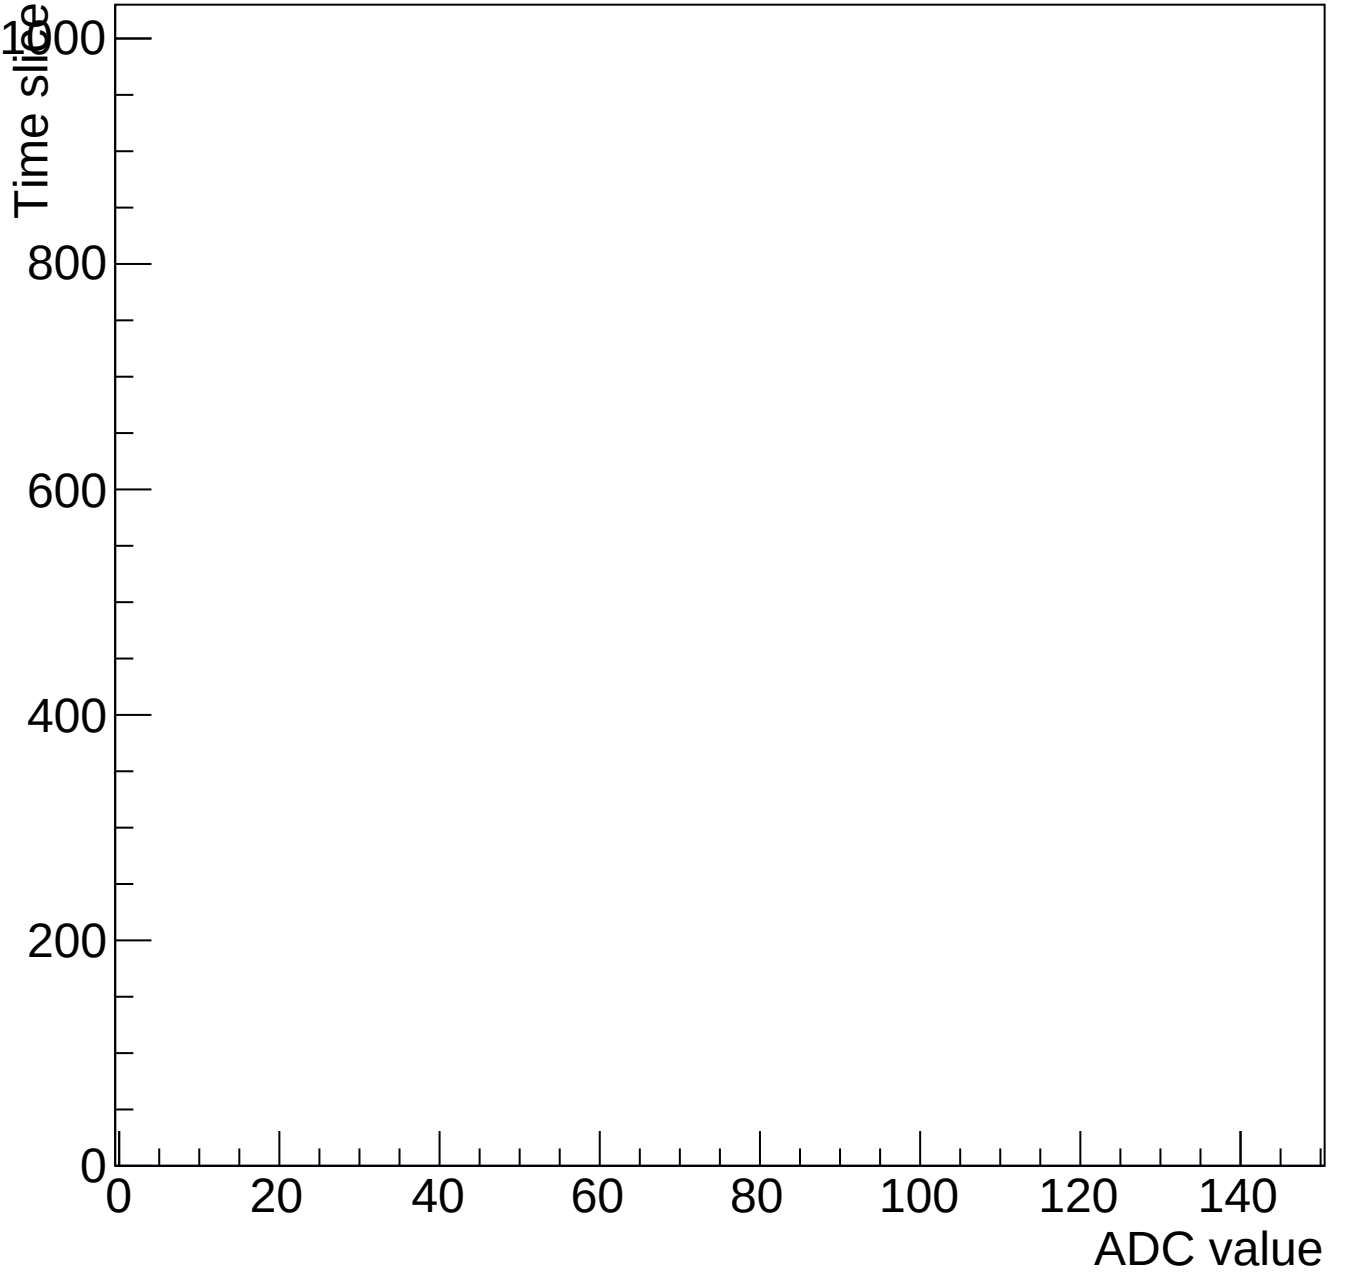


Run 34991 Evt 10 Time mcm 2003 chip -1 chan -1 square-6V-wire20-135-gain0-shaper1

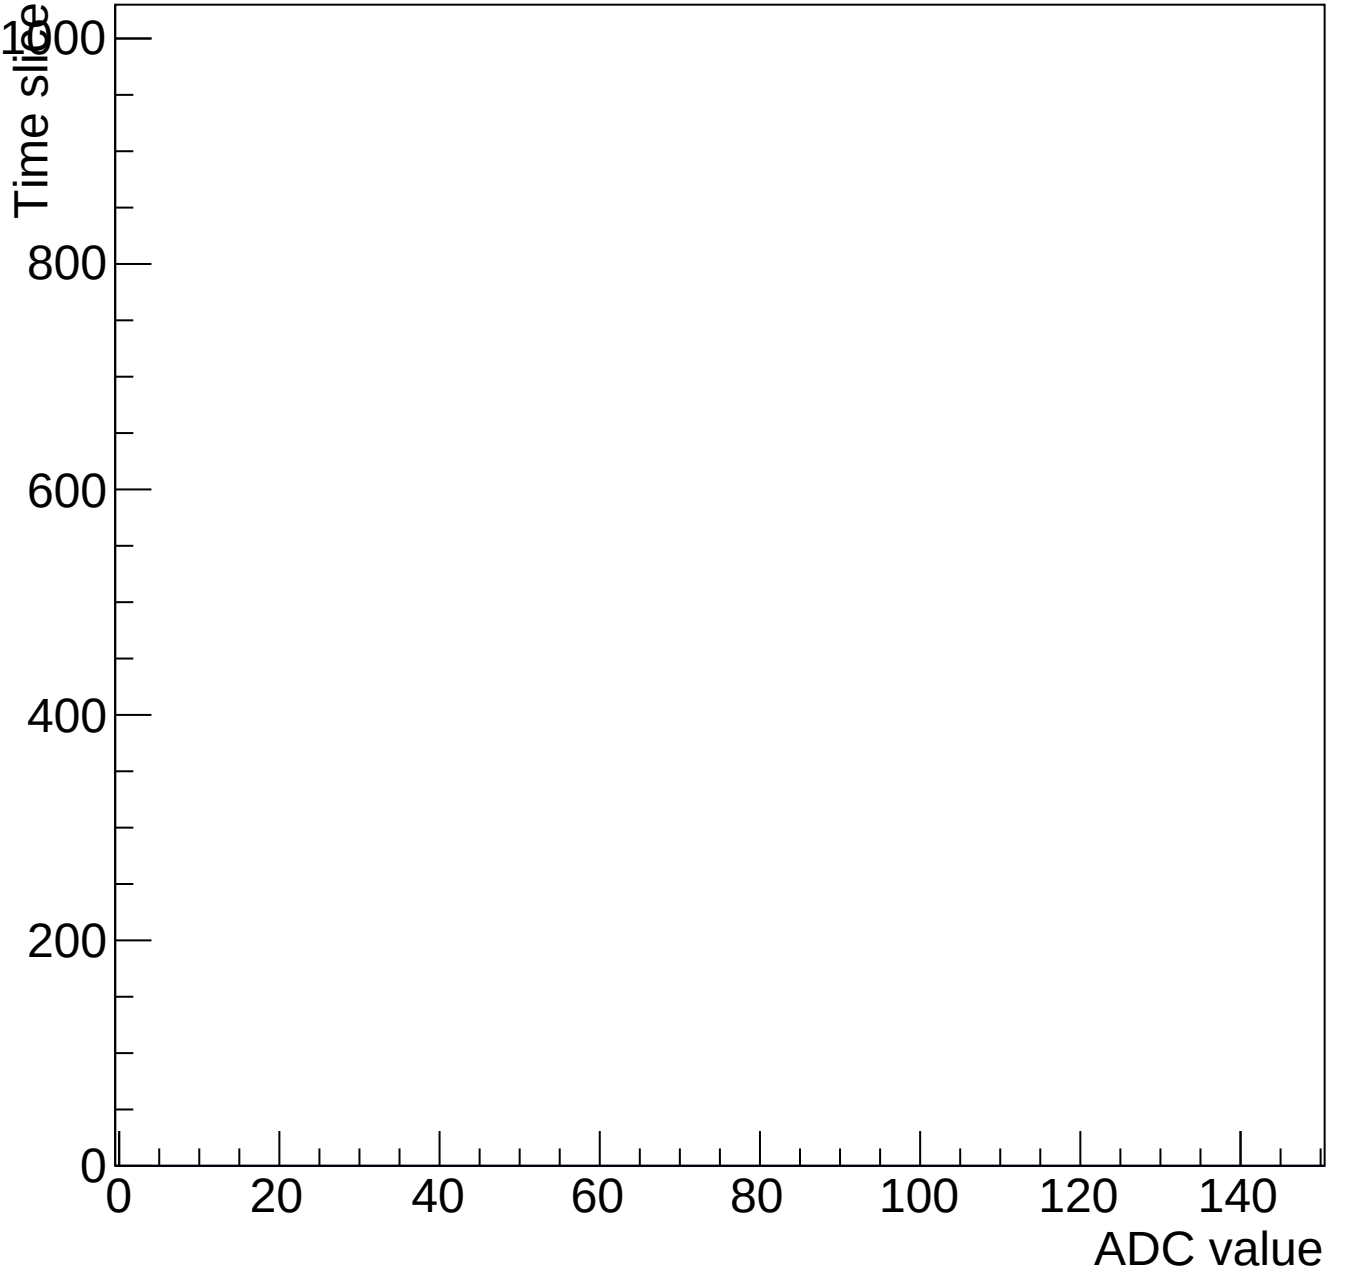


Run 34991 Evt 10 Time mcm 2003 chip -1 chan -1 square-6V-wire20-135-gain0-shaper1

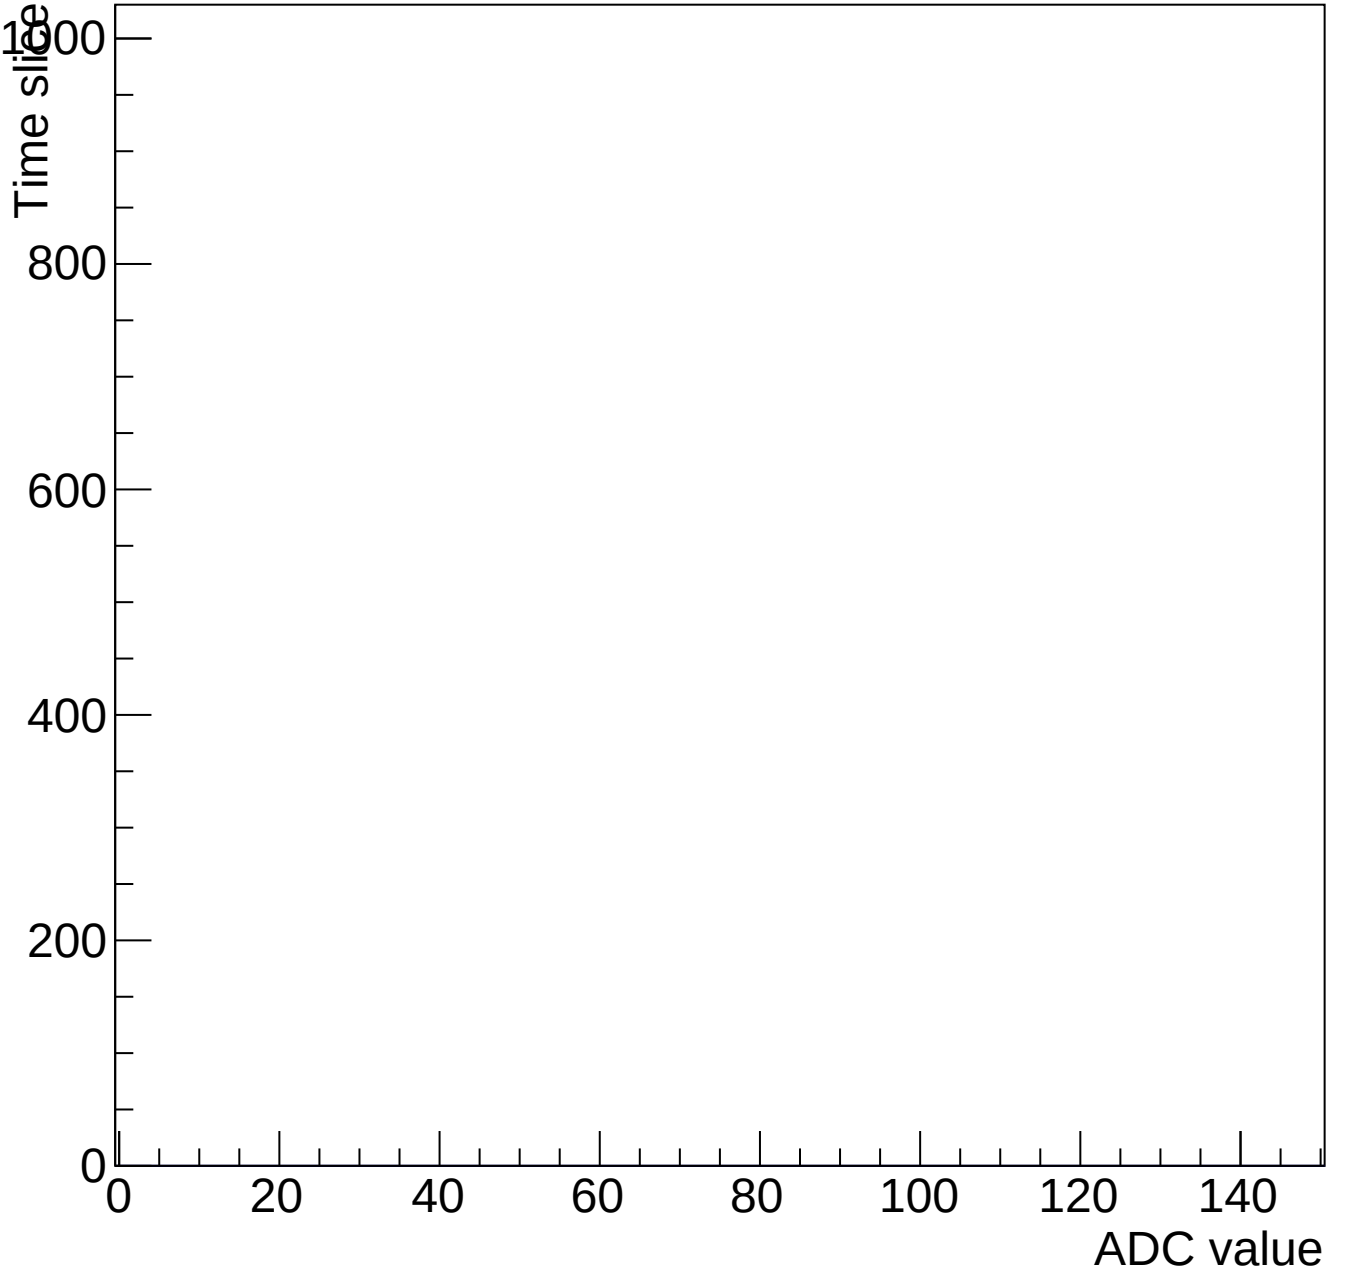


Run 34991 Evt 10 Time mcm 2003 chip -1 chan -1 square-6V-wire20-135-gain0-shaper1

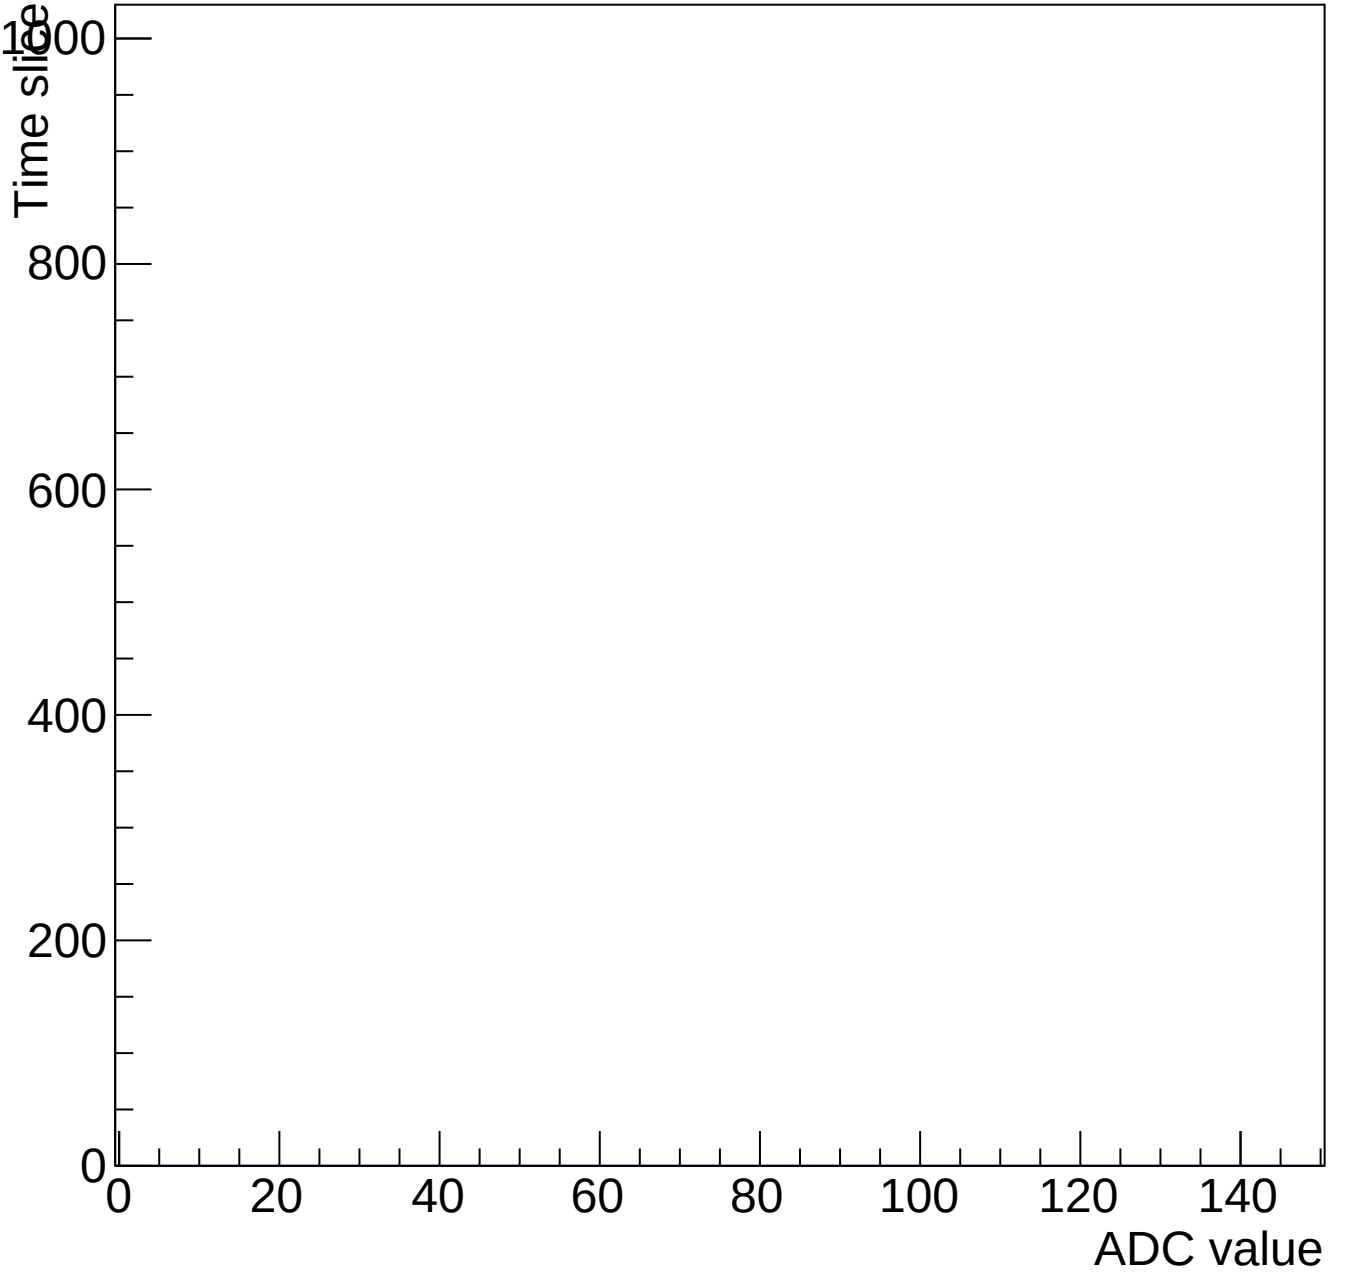

Run 34991 Evt 10 Time mcm 2003 chip -1 chan -1 square-6V-wire20-135-gain0-shaper1

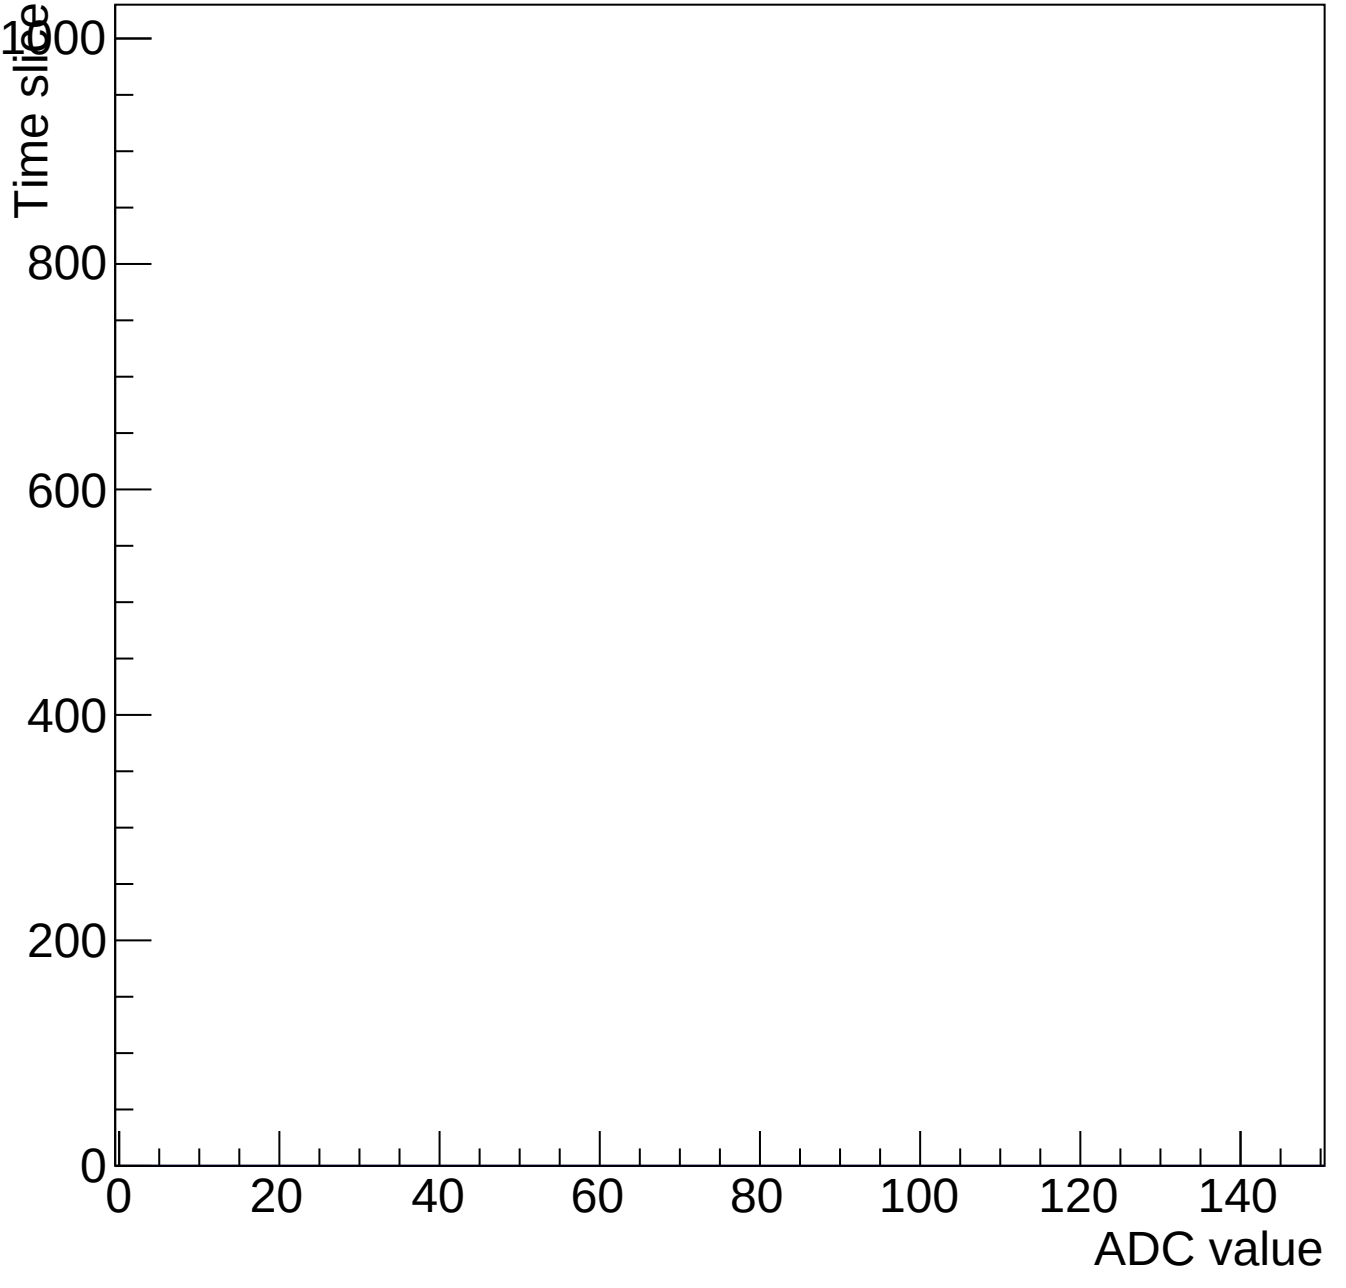

Run 34991 Evt 10 Time mcm 2003 chip -1 chan -1 square-6V-wire20-135-gain0-shaper1

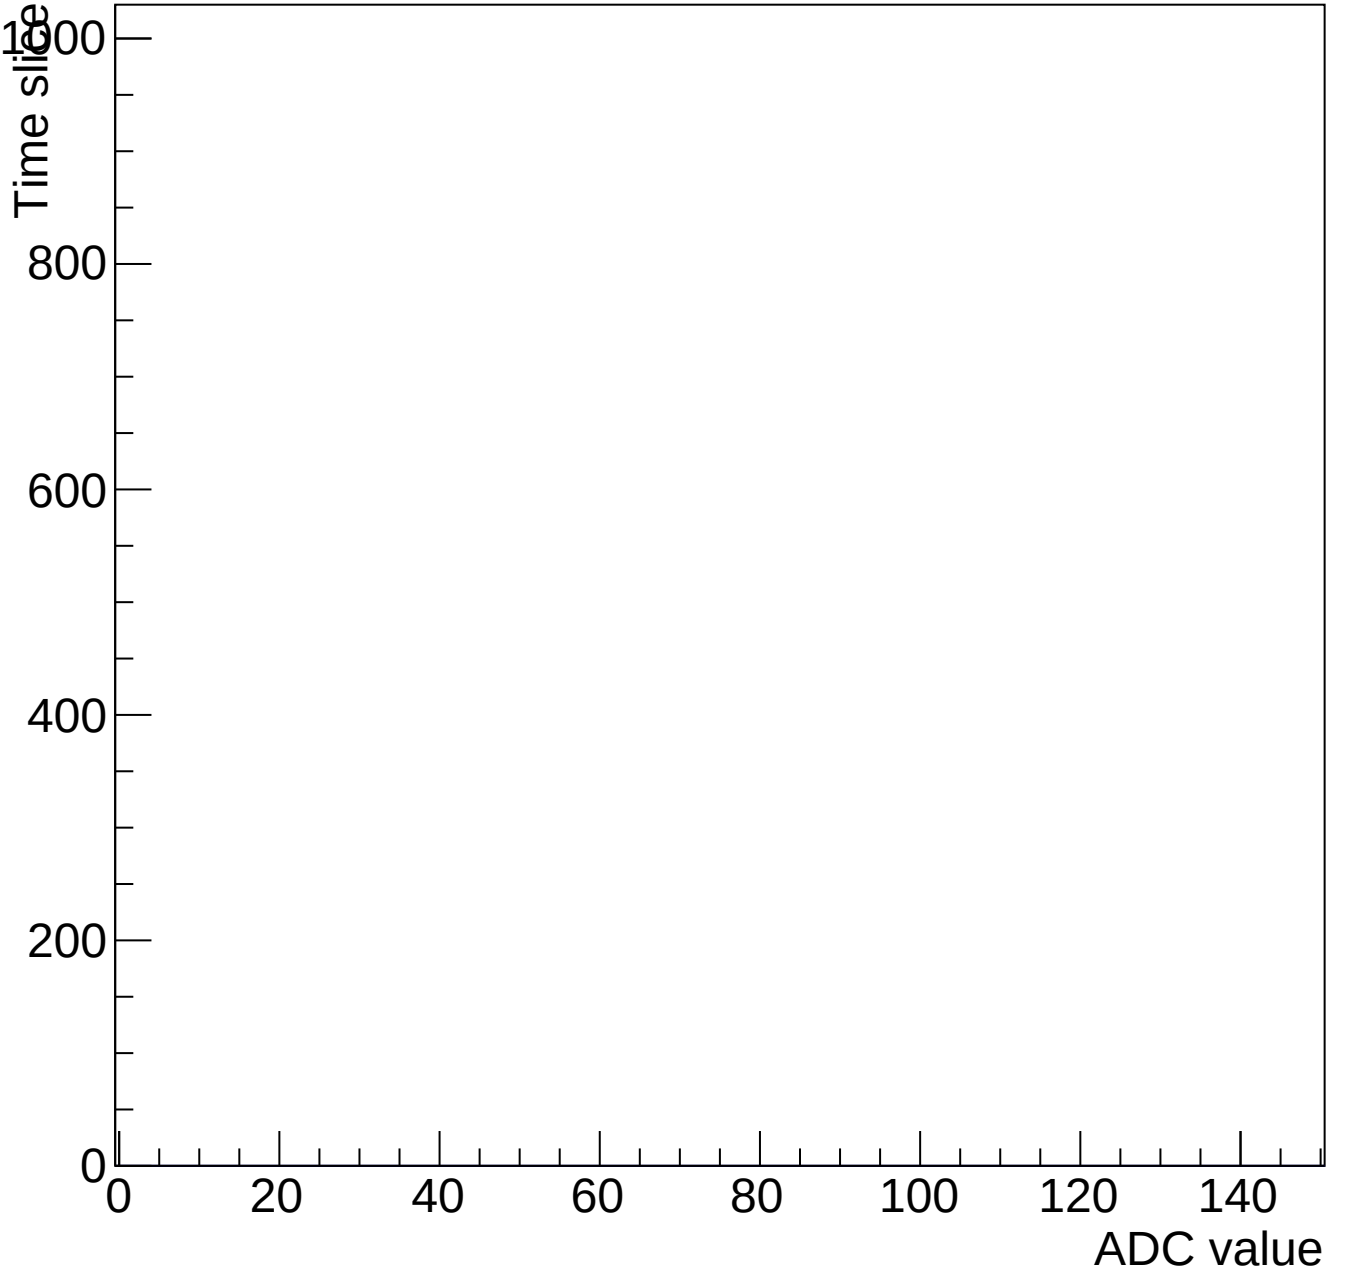

Run 34991 Evt 10 Time mcm 2003 chip -1 chan -1 square-6V-wire20-135-gain0-shaper1

